

# Climadiff

Rafrâchisseur de bouteilles

## NOTICE D'UTILISATION – ECHANSON2



**Before use, please read and follow the safety rules and operating instructions in this manual.**

Firstly, we would like to thank you for purchasing a **CLIMADIFF** product and hope that this bottles cooler fully lives up to your expectations. We are sure it will be quickly your best partner for any degustation you may organise.

## **1. GENERAL SAFETY INSTRUCTIONS**

- For your safety and correct usage, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents or to avoid damage to the appliance, it is important to make sure that all people using the appliance are thoroughly familiar with its operation and safety features.
- Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone using it throughout its life will be properly informed on its usage and safety notices. This will ensure optimum operation of the appliance.
- This appliance can be used by children aged from 8 years and above, and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Cleaning and user maintenance shall not be made by children, unless they are more than 8 years and they are under supervision.
- Make sure that children do not play with this device, keep them away from the appliance and its main cable.
- Keep all packaging elements (plastic, polystyrene bags, etc.) away from children as there is risk of suffocation.
- Before using, check the general condition of the appliance. Make sure that none part is broken or there is no default which could affect the correct use, otherwise please contact your distributor or a professional repairer.
- This appliance is exclusively intended for domestic use. Any other use is considered to be inappropriate and dangerous.
- Do not use this appliance outside.
- Keep the device away from any heat source (radiators, stoves, ...) and do not expose it directly to sunlight and do not expose it to bad weather conditions (rain, snow, frost, humidity, ...).
- Avoid placing on top of stereo equipment that radiates heat.
- Do not cover the appliance during use and do not remove cover or back.
- Never clean the appliance with inflammable products.

- Do not store or spray any gas or inflammable liquid close to the appliance.
- To prevent any danger, do not replace a damaged mains cable yourself. Contact your retailer, an approved service centre or professional repairer.
- Make sure that your electrical installation's voltage corresponds to that on the appliance's nameplate; the appliance must be connected to an approved, earthed system. Incorrect repairs or connections can cause safety hazards. Have your electrical installation checked by a professional, if you are in any doubt.
- This unit must be correctly connected to an earthed socket for your protection. Do not cut off or remove the earth wire on the mains cable supplied.
- For safety reasons, do not use an electrical extension cable.
- If your appliance is damaged (e.g. a major impact) or suffers harm (power surge due to lightning, flood, fire), it may be dangerous to use. Disconnect the mains plug and have the appliance checked by an approved professional repairer.
- In the event that liquid is accidentally spilled (broken bottle, etc.) on electrical components (motor, etc.), disconnect the mains plug immediately.

- To prevent any risk of fire, electrocution or injury, do not immerse the mains cable, plug or the appliance itself in water or any other liquid. Do not handle the appliance with wet hands.
- Do not allow the mains cable to hang from a table or be in contact with sharp edges or hot surfaces.
- Do not pull on the mains cable - take hold of the plug to disconnect the appliance.
- Never block the air opening of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or a couch, where the air openings may be blocked.
- Do not carry this unit by cord or use cord as handle.
- Do not place or store unit where it can fall or be pulled into a tub or sink (shower, bath, sink, ...).
- Always unplug the unit from the electrical outlet immediately after using. It's important to disconnect the device before performing any servicing or cleaning operation (disconnect the mains plug), in case of storms or when unused for long period of time.
- The abuse of alcohol is dangerous for your health, to be moderately consumed.

### CAUTION:

- To reduce the risk of electric shock, do not remove cover or back. There are no user-serviceable parts inside.
- To reduce the risk of fire or electric shock, do not expose this unit to water or moisture.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.


Climadiff disclaims any liability for damage resulting from failure to comply with use instructions.

**This appliance complies with the following Europeans standards:**

- 2014/35/EU on electrical safety
- 2014/30/EU on electromagnetic compatibility



## **2. DESCRIPTION OF THE APPLIANCE**

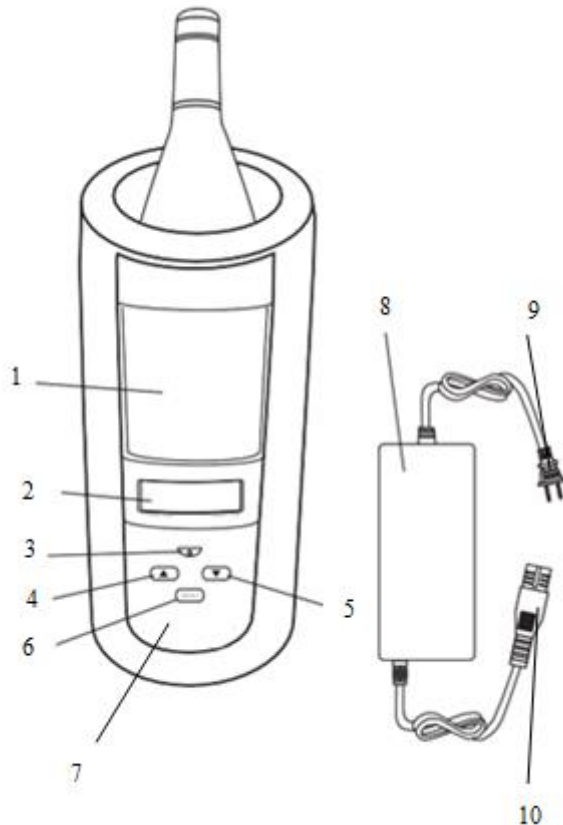

1. Transparent windows with LED light
2. LCD Display (shows the wine selection list and current settings)
3. POWER button (turns the unit on and off)
4. UP button (enable selection of the wine type and name)
5. DOWN button (enable selection of the wine type and name)
6. SELECT button (confirms the on-screen selection)
7. Control panel
8. DC jack
9. AC plug
10. DC plug

## **3. PRODUCT FEATURES**

It uses Peltier technology to cool/warm the bottle of wine. It is very easy for users to keep wine at cool temperatures and enjoy their drink. Simply select your wine from the backlit LCD screen (36 temperatures possibilities) and the chilling or warming begins.

You'll always know when your wine is ready because an alarm alerts you when it has reached the optimum serving temperature.

With patented DCS (Direct Conduction System) Technology, the unit has a much better cooling performance and less power consumption. The deluxe outlook makes it a perfect presentation at dining & VIP rooms to show off your prestige:

- Patented DCS (Direct Conduction System) technology,
- Faster chilling speed depends on the room temperature where the ECHANSON2 is and on the wine temperature. In a general way, performances of the appliance are the following:
  - decreases and reaches about 12°C in the first two hours,
  - enjoy your red wine in one hour.

- Chamber design ensures better heat insulation,
- Use the extensive wine library to choose the perfect temp.,
- Accurate temperature control to ensure the best serving aroma, taste & favor,
- Patented design & technology,
- Suitable for wine bottles of diameter up to 85mm,

## **4. OPERATION INSTRUCTIONS**

### **1. Unpack the machine**


After removing the packaging materials, there should be 3 items:

- Wine bottle chiller/Warmer unit
- AC/DC adapter
- Instruction manual


### **2. Change between °C and °F**

When the unit is off, press the POWER (3) and SELECT (6) buttons simultaneously for 1 second, “Fahrenheit” displays (default) in LCD screen. Press UP/DOWN (4/5) once to switch to “Celsius” and press again to switch to “Fahrenheit”, and then press SELECT (6) to accept “Fahrenheit” or “Celsius”.

Fahrenheit

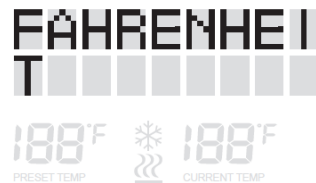

Celsius

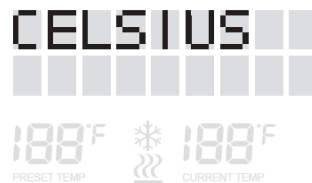


Then the unit will switch off automatically. The new setting will be displayed when the unit is turned on next time.

### **Operation details**

Press and hold the POWER button (3) to turn on the unit. There is a beep sound and the LCD display will illuminate briefly display all the icons. In the same time, the LCD light build-in the transparent door will be lit. It is easier for user to observe the wine's label.

The screen will display the first selection choice.

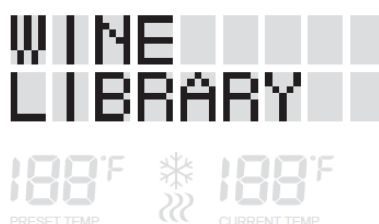



Press SELECT (6) button, and then press UP/DOWN (4/5) to scroll between the wine types “RED WINE”, “WHITE WINE” and “CHAMPAGNE”. Press SELECT button (6) to accept wine type options (red wine, white wine and Champagne) to view the wine list for the wine type.



Press UP/DOWN (4/5) to scroll between the wine names inside each wine type. At the end of each selection list, there is an EXIT option. Press SELECT button (6) to accept EXIT option, it will returns you to the previous list of options.



Press SELECT button (6) on wine selection to accept the wine. Then the machine will detect the temperature in a minute and then show the wine's best serving temperature and begins to cool/warm the wine bottle automatically.



When the wine bottle temperature reaches the pre-set temperature, the unit bleeps three times at 1 second intervals and “CHEERS!” is displayed on the screen. The temperature will be maintained at the pre-set temperature automatically.



It is normal for the unit to turn on and off as it maintains the pre-set temperature. If you have reset the screen back to the wine name then the unit will bleep again when it reaches the preset temperature.

The main function of this unit is not only just for “cooling” or “warming” the wine bottle, but also maintaining the wine temperature at a set point so that the user can enjoy wine drinking at leisure. However, the user should note that the white wine bottle should be pre-cooled in a refrigerator before putting it in the wine bottle cooler/warmer to maintain temperature or it will take more than one hour to cool the bottle.

## **5. WINE TYPES & TEMPERATURES**

WINE TYPE	°C	°F
<b>CHAMPAGNE</b>		
Asti	6	43
Champagne	7	45
Vin pétillant / Sparkling Wine	7	44
<b>RED WINE</b>		
Alsace	16	61
Beaujolais	12	54
Bordeaux	17	63
Bourgogne	16	61
Cabernet	17	63
Cabernet Sauvignon	18	64
Châteauneuf-du-Pape	17	63
Chianti	14	57
Corse	15	59
Jura	13	55
Malbec	17	63
Merlot	17	63
Pinot Noir	15	59
Provence	12	54
Rhone	17	63
Savoie	12	54
Shiraz	18	64
Val de Loire	13	55
Valpolicella	14	57
<b>WHITE WINE</b>		
Alsace	8	46
Bordeaux	6	43
Chablis	8	46
Chardonnay	9	48
Chenin Blanc	8	46
Corse	8	46
Jura	13	55

Pinot Gris	9	48
Pouilly-Fuissé	8	46
Provence	6	43
Sauternes	10	50
Sauvignon Blanc	7	45
Savoie	8	46
Val de Loire	8	46

## **6. SPARE PARTS**

None spare parts are available in case of failure. If your wine opener is defective, contact your retailer's after sale department showing them your invoice, while the appliance is under the warranty scope. Your appliance will be either exchanged or refunded.

## **7. MAINTENANCE**

1. Before cleaning your appliance (something that should be done regularly), disconnect it by removing the plug or by pulling the fuse on the circuit.
2. Before using your appliance for the first time and regularly after that, we recommend that you wipe the outside parts with a soft and dry rag.

**Note:** do never use alcohol or solvent to clean the appliance. Do never immerse the appliance in water or any other liquid.

## **8. ENVIRONMENT**

This appliance is marked according to the European directive 2012/19/CE on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol on the product, or on the documents accompanying the product, the Crossed Out Wheelie Bin, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or, if you are buying an equivalent product, to the retailer of the new product.

The user is responsible for taking the appliance to the appropriate collection centre at the end of its useful life. Selective and appropriate collection for the recycling of no longer used appliances and their disposal and destruction in an environmentally friendly manner, helps to prevent potential negative effects on the environment and health, and encourages the recycling of materials used to make the product.

For more detailed information about treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the retailer where you purchased the product.

## **9. WARNING**

As we continuously improve our products for the benefit of our customers, we reserve the right to modify technical characteristics without notice.

Warranties for CLIMADIFF brand products are offered exclusively by selected retailers. No part of these instructions may be considered as a supplementary guarantee.

FRIO ENTREPRISE cannot be held liable for errors or technical or editorial omissions in this document.

Non-binding document.