

cecotec

PROCLEAN 8110 FULL INOX

Microondas / Microwave



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Handleiding
Instrukcja obsługi
Návod k použití

1. PARTS AND COMPONENTS

Fig. 1

1. Safety door-interlock system
2. Observation window
3. Turntable shaft
4. Turntable ring assembly
5. Turntable
6. Control panel
7. Mica plate
8. Grill

Buttons

Fig. 2

1. On button
2. Grill/Combi button
3. Defrost/Clock button
4. Autocooking button
5. Pause/Cancel button
6. Start button

NOTE:

The graphics in this manual are schematic representations and may not exactly match the appliance.

2. BEFORE USE

- This appliance is packaged in a way as to protect it during transport. Take the appliance out of its box and remove all packaging materials. You can keep the original box and other packaging elements in a safe place. This will help you prevent damage to the appliance when transporting it in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly.
- Make sure all parts and components are included and in good conditions. If there is any piece missing or in bad conditions, contact the official Cecotec Technical Support Service immediately.
- The appliance must be placed on a flat, stable, and dry place and kept away from corrosive materials, heat, and humidity, such as gas burners or water.
- To ensure enough ventilation, minimum distances have to be kept:
 1. From the back part to the wall: 10 cm.
 2. From the side to the wall: 5 cm.

3. Free distance from the top surface: 20 cm.
 4. From the microwave to the ground: 85 cm.
- The appliance must be placed at least 5 m away from TVs, radios, or antennas.
 - To avoid electric shock, the microwave must be installed in such a way that the plug is accessible and that an effective earth connection is provided in the event of a current leakage.
 - The microwave door must be closed in order to operate.
 - In case there is any manufacturing remains in the microwave cavity or on the heating elements, leave the microwave open to ensure good ventilation. In such case, it is recommended to heat a glass of water at high power for several times.

Warning:

Do not try to remove the mica plate. This component is essential for the appliance to work properly. The mica plate must be clean to ensure its proper operation.

3. OPERATION

Before cooking

Connect the appliance to a power outlet. Once connected, the LED light will flash 3 times and will show 1:00.

Time/weight knob

Cooking time and food weight can be increased or decreased during operation, depending on the mode, by turning the Time/Weight knob.

Pause/Cancel

- Before operation, press the button once to reset the settings and return to factory state.
- During operation: press once in order to interrupt operation or press twice in order to cancel pre-set cooking program.

Reminder

Once the pre-set cooking process is over, END will appear on the LED display panel and the microwave will beep 3 times. Press Pause/Cancel button or open the microwave door in order to stop the alarm, otherwise the alarm will sound at an interval of 3 minutes.

Instant cooking

From the initial position, press the Start button, the microwave will automatically operate at high power for 1 minute. Cooking time can be increased or decreased during operation by turning the Time/Weight knob.

Clock/timer setting

Use the Defrost/Clock button to set the time (by holding down the button for 3 seconds) and to set the Defrost mode (press once).

Example: Setting clock at 12:30		
	Steps	Display
1	After powering up, the display panel shows the colon sign.	1:00
2	Hold down the Defrost/Clock button for 3 seconds.	1:00
3	Turn the Time/Weight knob to set the exact hour.	12:00
4	Press the Defrost/Clock button once.	12:00
5	Turn the Time/Weight knob to set the exact number of minutes.	12:30
6	Press the Defrost/Clock button once to confirm the set time or wait for 5 seconds for the microwave to set it automatically.	

Microwave cooking

- Use this function in order to cook or heat food.
- Press the On button and select on the LED display panel between: 100P-80P-60P-40P-20P.

High power	100 % microwave power. Perfect for quick and thorough cooking.
Medium-High power	80 % microwave power. Perfect for medium express cooking.
Medium power	60 % microwave power. Perfect for steaming food.
Medium-Low power	40 % microwave power. Perfect for defrosting food.
Low power	20 % microwave power. Perfect for keeping food warm.

- Microwave cooking can be set up to 60 minutes.
- Cooking or heating time may be changed during operation. It is recommended to turn or stir food at least once during the process. Press the Start button once to resume operation.
- If food is removed before the pre-set time, make sure you press Pause/Cancel once in order to stop operation and avoid the microwave from operating automatically and empty when closed.
- When operating at maximum power, the microwave will automatically lower power after a certain time in order to lengthen the shelf life of the appliance.

Example: Cooking at P80 for 10 minutes.		
	Steps	Display
1	After powering up, the display panel shows:	1:00
2	Select the desired microwave power by pressing the On button consecutively.	80P
3	Turn the Weight/Time knob to select the desired cooking time.	10:00
4	Press the Start button to start operation. The LED will display the countdown.	

Grill and Combination

Press the Grill/Combi button once to select the grill or combination function. The LED display panel will show 3 modes, turn the Time/Weight knob to select the desired one:

G (Grill)	Only heating elements will be energised during operation. Perfect for cooking sausages, pork, chicken wings...
C.1	Combines 30% microwave operation and 70% grill operation.
C.2	Combines 55 % microwave operation and 45 % grill operation.

Example: Grilling food on C.2 mode for 10 minutes.		
	Steps	Display
1	After powering up, the display panel shows the colon sign.	1:00
2	Press the Grill/Combi button to select the mode.	C.2
3	Set the cooking time by turning the Time/Weight knob.	10:00
4	Press the Start button once to resume operation.	

Defrost

Function designed to defrost different types of food. Press the Defrost/Clock button once and turn the Time/Weight knob to select Defrost mode:

d.1	Perfect for defrosting meat (0.1 kg-2.0 kg)
d.2	Perfect for defrosting poultry (0.2 kg-3.0 kg)
d.3	Perfect for defrosting fish/seafood (0.1 kg-0.9 kg)

ENGLISH

When the LED displays the desired programme, press the Defrost/Clock button again and turn the Time/Weight knob to set the weight of the food to be defrosted. Press the Start button to start the process.

- It is highly recommended to turn over food during operation in order to obtain a more uniform result.
- Defrosting usually needs more time than cooking.
- If the food can be cut by knife, the defrosting process is complete.
- Microwave radiation penetrates around 4 cm into most foods.
- Defrosted food should be consumed as soon as possible. It is not recommended to freeze or put it back in the fridge again.

Example: Defrosting 0.5 kg of chicken		
	Steps	Display
1	After powering up, the display panel shows the colon sign.	1:00
2	Press the Defrost/Clock button to set the food defrost type.	
3	Press the Defrost/Clock button to set the weight.	d.2
4	Turn the Time/Weight knob to set food weight.	0.4
5	Press the Start button once to resume operation.	
6	During the defrosting process, an alarm will sound to remind you to flip the food. Turn food over, close the microwave's door and press the Start button again to resume the defrost process.	

Auto cooking

The microwave has 8 default programmes, select the most appropriate one according to the food type and weight. Press the Autocooking button consecutively: the LED display panel will show different programmes. Use the Weight/Time knob to select one of the following:

Display	Food	Dish
A.1	Popcorn	Perfect for cooking 85 g of popcorn.
A.2	Reheat	Perfect for reheating from 0.2 to 1 kg of food.
A.3	Liquids	Perfect for heating 250 ml of liquid. Liquid must be between 5 °C and 10 °C. Do not seal the liquid container.
A.4	Pizza	Perfect for heating 1 or 2 pizza slices.

A.5	Potato	Perfect for cooking potato cubes (5 mm height and width), 0.45-0.65 kg maximum. Place potato cubes on a large tray or container and cover it with a thin film to prevent water loss.
A.6	Frozen dinner	Perfect for heating cooked food.
A.7	Rice	Perfect for cooking 0.1-0.5 kg of rice.
A.8	Vegetables	Perfect for cooking 0.1-0.5 kg of vegetables.

Before cooking or heating food, its temperature must be about 20-25 °C. Higher or lower temperature of the food before cooking would require increasing or decreasing cooking time. The temperature, weight, and shape of the food will strongly influence the microwave effect on the cooking process. Adjust time in order to obtain the best result.

Example: Cooking 0.5 kg of rice		
	Steps	Display
1	After powering up, the display panel shows:	1:00
2	Press the Autocooking button to set cooking mode.	A.7
3	Set food weight by turning the Time/Weight knob.	0.5
4	Press the Start button to start operation. The LED will display the countdown.	

Automatic start

- This function allows you to set cooking programme and time. This way, the pre-set programme will automatically start at the pre-set time. In order to activate this mode:
- Set the timer.
- Set the cooking programme.

Example: It is 12:30 and you want to programme the microwave at 80 P, for 9 minutes and 30 seconds at 14:20.		
	Steps	Display
1	After powering up, the display panel shows:	1:00
1.1	Hold down the Defrost/Clock button for 3 seconds.	1:00
1.2	Set hour by turning Time/Weight knob.	12:00
1.3	Press the Defrost/Clock button again to confirm the hours.	12:00

1.4	Set the minutes by turning the Time/Weight knob.	12:30
1.5	Press the Defrost/Clock button to confirm the set time or wait for 5 seconds for the microwave to set it automatically.	12:30
2	Set the cooking programme and cooking time.	
2.1	Select power by pressing the On button.	100P
2.2	Turn the Time/Weight knob to set the cooking time.	9.30
2.3	Hold down the Defrost/Clock button for 3 seconds.	
3	Set the time at which you want to activate the selected programme and repeat steps 1.2, 1.3, 1.4.	
4	Press the Defrost/Clock button to confirm the selected cooking programme. Now the program has been activated and operation will start at 14.20.	
5	You may check the pre-set starting time by pressing the Defrost/Clock button.	

Multi-sequence cooking

In order to obtain the best result, some recipes require different steps. This function allows you to personalise and to combine your cooking processes.

Example: It is 12:30, you want to programme the microwave at P 80 for 9 minutes and 30 seconds at 14.20.		
	Steps	Display
1	Select 100 P microwave for 3 minutes.	
1.1	Press the On button to select the desired power level.	100P
1.2	Set the cooking time by turning the Time/Weight knob.	3:00
2	Grill function for 9 minutes.	
2.1	Press the Grill/Combi button to select the Grill mode.	G
2.2	Set the cooking time by turning the Time/Weight knob.	9:00
3	Press the Start button to start operation.	

When the microwave function is finished, grilling function will operate automatically.
4 sequences total can be set at a time. If more sequences are required, repeat stated steps.

Safety child lock

- Security system that blocks the control panel to ensure small children do not use the appliance without supervision.
- To activate lock: Hold the Pause/Cancel button for 3 seconds.
- To deactivate lock: Hold the Pause/Cancel button for 3 seconds.

Microwave cooking tips

- Food arrangement: place the thickest food parts towards the edge of the turntable. If possible, do not overlap food.
- Watch the cooking time: cook for the shortest amount of time at first, and add more minutes if necessary. Over-cooking may result in smoke and burns.
- Cover food while cooking: covering the food you are going to cook avoids spattering and allows for a more even cooking.
- Flip or stir food once during the cooking process.
- Respect pre-heating time. Pre-heating time specified on the food label must not be exceeded.
- It is important to use materials and containers which are suitable and safe for microwave cooking. The table below shows which materials are suitable and which are not:

Container material	Suitable	Warnings
Browning dish	Yes	Follow the manufacturer's instructions. The bottom of the browning dish must be at least 5 mm above the turntable. A misuse may break the turntable.
Dinnerware	Yes	Suitable for microwaves only. Follow the manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Yes	Always remove the lid. Use them only to slightly heat food. Most glass jars are not heat resistant and may break.
Glassware	Yes	Heat-resistant microwave glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Microwave cooking bags	Yes	Follow the manufacturer's instructions. Do not close with a metal tie. Make slits to allow steam to escape.

ENGLISH

Paper towels	Yes	Use to cover food for reheating and absorbing fat. Use with care for short-term cooking/warming only.
Baking paper	Yes	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Yes	Microwave-safe only. Follow the manufacturer's instructions. It must be labelled as "Microwave-safe". Some plastic containers soften, as the food inside gets hot. Boil-in bags and closed plastic bags should be cut or punctured slightly if indicated on the appliance.
Plastic wrap	Yes	Microwave-safe only. Use it to cover food during cooking and retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Yes	Microwave-safe only (meat and candy thermometers).
Aluminium tray	No	May cause arcing. Move food into a microwave-safe dish or container.
Food carton with metal handle	No	May cause arcing. Move food into a microwave-safe dish or container.
Metal or metal-trimmed utensils	No	Metal shields the food from microwave energy. The metal trim could cause an electric arc.
Metal twist ties	No	May cause arcing. Move food into a microwave-safe dish or container.
Paper bags	No	May cause a fire in the microwave.
Plastic foam	No	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	No	Wood will dry out when used in the microwave and may split or crack.

4. CLEANING AND MAINTENANCE

Warning

The appliance, as well as food remains, must be cleaned and removed regularly. Lack of maintenance of the microwave may affect the mica plate and could damage the microwave.

- Disconnect the power cord from the wall socket before cleaning. Do not immerse the appliance in water or any other liquid during cleaning.
- Failure to maintain the appliance in clean conditions could lead to surface deterioration and adversely affect shelf life.
- Never use strong detergents, abrasive powders, or a metal brush to clean any part of the appliance.
- Do not remove the mica plate.
- When the microwave has been used for a long time, some strong odours may arise from inside. To eliminate these odours, follow one of the below methods:
 - Place several lemon slices in a cup and heat them at high power for 2 or 3 minutes.
 - Place a cup of red tea inside the microwaves and heat it at high power for 2 or 3 minutes.
 - Place orange peels inside the microwaves and heat them at high power for 1 minute.
- Use a soft, damp cloth to clean the gaskets, door, interior walls, and turntable.

5. TECHNICAL SPECIFICATIONS

Product reference: 01542

Product: ProClean 8110 Full Inox

Power inlet: 1400 W

Microwave power: 900 W

Grill power: 1000 W

Voltage and frequency: 230 V, 50 Hz

Capacity: 28L

Technical specifications may change without prior notification to improve product quality.

Made in China | Designed in Spain

6. DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC APPLIANCES



This symbol indicates that, according to the applicable regulations, the product and/or batteries must be disposed of separately from household waste. When this product reaches the end of its shelf life, you should dispose of the cells/batteries/accumulators and take them to a collection point designated by the local authorities.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old machines and/or their batteries.

Compliance with the above guidelines will help protecting the environment.

7. TECHNICAL SUPPORT AND WARRANTY

Cecotec shall be liable to the end user or consumer for any lack of conformity that exists at the time of delivery of the product under the terms, conditions, and deadlines established by the applicable regulations.

It is recommended that repairs be carried out by qualified personnel.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact the official Cecotec Technical Support Service at +34 963 210 728.

8. COPYRIGHT

The intellectual property rights over the texts in this manual belong to CECOTEC INNOVACIONES, S.L. All rights reserved. The contents of this publication may not, in whole or in part, be reproduced, stored in a retrieval system, transmitted, or distributed by any means (electronic, mechanical, photocopying, recording or similar) without the prior authorization of CECOTEC INNOVACIONES, S.L.

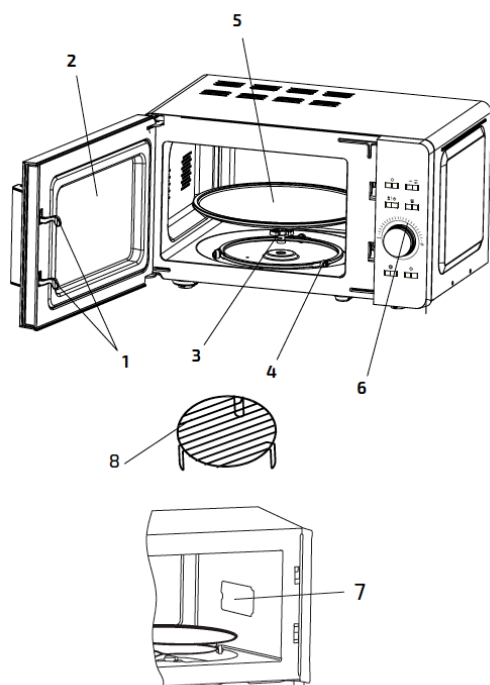


Fig./Img./Abb./Afb./ Rys. 1

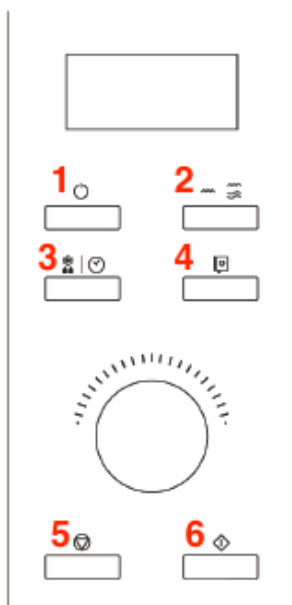


Fig./Img./Abb./Afb./ Rys. 2

www.cecotec.es

Cecotec Innovaciones S.L.
Av. Reyes Católicos, 60
46910, Alfafar (Valencia)
AP01230329