CONGA

IMMORTAL EXTREMESUCTION 22,2 HAND IMMORTAL EXTREMESUCTION 22,2 ANIMAL HAND Aspirador digital de mano /Handheld digital vacuum cleaner

a deal caller and the second s

cecutec

Manual de instrucciones Instruction manual Manuel d'instructions Bedienungsanleitung Manuale di istruzioni Manual de instruções Instructiehandleiding Instrukcja obsługi Návod k použití

8. COPYRIGHT

Los derechos de propiedad intelectual sobre los textos de este manual pertenecen a CECOTEC INNOVACIONES, S.L. Quedan reservados todos los derechos. El contenido de esta publicación no podrá, ni en parte ni en su totalidad, reproducirse, almacenarse en un sistema de recuperación, transmitirse o distribuirse por ningún medio (electrónico, mecánico, fotocopia, grabación o similar) sin la previa autorización de CECOTEC INNOVACIONES, S.L.

1. PARTS AND COMPONENTS

Fig. 1

- 1. Dust tank
- 2. High-efficiency filter
- 3. Tank release button
- 4. LED light
- 5. On/Off button
- 6. Charger
- 7. Power adapter
- 8. Tube
- 9. Accessory for corners
- 10. Brush for cars/furniture
- 11. Accessory for liquids
- 12. Adapter
- 13. Pet accessory (only included with the Conga Immortal ExtremeSuction 22,2 Animal Hand model)
- 14. Filter protection

Note

The graphics in this manual are schematic representations and may not exactly match the product.

2. BEFORE USE

Take the device out of its package and check if there is any visible damage. Should it be the case, contact the Technical Support Service of Cecotec as soon as possible for advice or reparation.

3. OPERATION

- Regularly check that there are no strange objects on the nozzle that may cause damage to susceptible surfaces.
- Insert the convenient accessory in the main unit to clean tables, cars, corners, sofas, carpets, etc.
- Introduce the accessory for liquids in the main unit to vacuum liquids.
- Switch the On/Off button in the up position to turn the vacuum cleaner on.
- Switch the On/Off button in the down position to turn the vacuum cleaner off.

Warning

When vacuuming liquids, do not exceed the MAX mark on the dust tank.

Charge light indicator

- Do not connect the charger while you use the product.
- Connect the charger to the power socket. Make sure the vacuum cleaner is off before connecting the charger. Fig. 2
- The blue light indicator will flash when the device is connected to the charger.
- The blue light indicator will remain steady when it is operating.
- To ensure the product is always ready to be used, we recommend you charge it while not in use.
- The charger may heat up during charge. This is normal.
- When the battery level is low, the light indicator will flash again.

Warnings

- We do not recommend using the vacuum cleaner while it is charging.
- The battery provided is the only battery compatible with the vacuum cleaner. Do not use the charger to charge non-rechargeable batteries.
- Unplug the vacuum cleaner if it is not going to be used for long periods of time.

Emptying the dust tank

Fig .3

- Remove the dust tank by pressing the release button.
- Remove the filter and the plastic protection and empty the dust tank content. Shake the filter or clean it with warm water, without detergent. Make sure the parts are completely dry before reassembling them.
- Wash and rinse the tank if necessary.
- Place the tank back in its position. It will click into place once properly positioned.

Note:

Make sure all parts are dry before placing them back in their position.

- Place the filter in the dust tank. Place the dust tank in the main unit following the removal procedure in reverse order.

4. CLEANING AND MAINTENANCE

- Use a soft, dampened cloth to clean the product's exterior housing.
- Wash the dust tank with water and dry it carefully before placing it back in the vacuum cleaner.

- Check the filter's condition regularly. If it is dirty, clean it with a small brush and rinse it with water. Let it air dry for 24 hours and reinstall it when it is completely dry.

5. TECHNICAL SPECIFICATIONS

Model: Conga Immortal Extreme Suction 22,2 V Animal Hand/Conga Immortal Extreme Suction Hand 0,5L 22,2 V Black Product reference: 05441/05440 Power socket: 220-240 V, 50 Hz Technical specifications may change without prior notification to improve product quality. Made in China | Designed in Spain

6. DISPOSAL OF OLD ELECTRICAL APPLIANCES



This symbol indicates that, according to the applicable regulations, the product and/or battery must be disposed of separately from household waste. When this product reaches the end of its shelf life, you should dispose of the batteries/accumulators and take them to a collection point designated by the local authorities.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries. Compliance with the above guidelines will help protecting the environment.

7. TECHNICAL SUPPORT AND WARRANTY

Cecotec shall be liable to the end user or consumer for any lack of conformity that exists at the time of delivery of the product under the terms, conditions, and deadlines established by the applicable regulations.

It is recommended that repairs be carried out by qualified personnel.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec official Technical Support Service at +34 963 210 728.

8. COPYRIGHT

The intellectual property rights over the texts in this manual belong to CECOTEC INNOVACIONES, S.L. All rights reserved. The contents of this publication may not, in whole or in part, be reproduced, stored in a retrieval system, transmitted, or distributed by any means (electronic, mechanical, photocopying, recording or similar) without the prior authorization of CECOTEC INNOVACIONES, S.L.

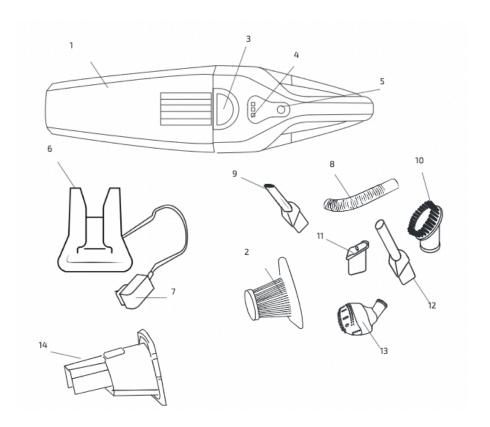


Fig./Img./Abb./Afb./ Rys./Obr. 1

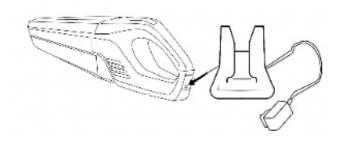






Fig./Img./Abb./Afb./ Rys./Obr. 3

www.cecotec.es

Cecotec Innovaciones S.L. C/ de la Pinadeta s/n, 46930 Quart de Poblet, Valencia (Spain) EA02220512