

cecotec

THERMOSENSE 170

Hervidor / Kettle



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Instructiehandleiding
Instrukcja obsługi
Návod k použití

1. PARTS AND COMPONENTS

Fig. 1

1. Jar
2. Base
3. Cable
4. Antiscale filter

2. BEFORE USE

- Before using the product for the first time, boil water twice without cleaning agents.
- Fill the jar with water without exceeding the limit, pay attention to the indicator to keep water below the max. level.
- Place the jar on the base.
- Make sure the mains voltage matches the voltage input of the appliance.
- Press the power button to start the process.
- After boiling water, the machine switches off automatically.
- Do not open the lid when serving.

3. OPERATION

1. Before using the product for the first time, boil water twice without cleaning agents.
2. Fill the jar with water without exceeding the limit, pay attention to the indicator to keep water below the max. level.
3. Place the jar on the base.
4. Make sure the mains voltage matches the voltage input of the appliance.
5. Press the power button to start the process.
6. After boiling water, the machine switches off automatically.
7. Do not open the lid when serving.

4. CLEANING AND MAINTENANCE

- Always disconnect the plug from the mains supply before cleaning the machine.
- The exterior of the jar can be cleaned with a slightly dampened cloth.
- In case the water used has caused minerals to build up, such as calc, it is suggested to fill half the kettle with water and lemon juice and boil it. If impurities are still left after this, repeat the process. Allow it to cool down before emptying and rinsing it.

5. TECHNICAL SPECIFICATIONS

Model: ThermoSense 170

Product reference: 01516

Capacity: 1.7L

Rated power: 1850-2200 W

Voltage and frequency: 220-240 V ~ 50/60 Hz

Made in China | Designed in Spain

6. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

7. TECHNICAL SUPPORT AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.

The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.

Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.

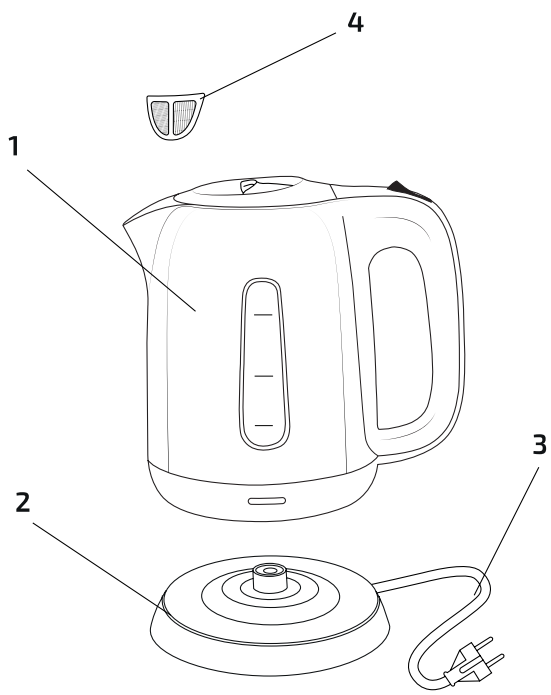


Fig./Img./Abb./Afb./ Rys./Obr. 1

www.cecotec.es

Grupo Cecotec Innovaciones S.L.
C/ de la Pinadeta s/n, 46930
Quart de Poblet, Valencia (Spain)
YV_02210217