

# cecotec

**THERMOSENSE 420 VINTAGE INOX/LIGHT BLUE/LIGHT GREEN/  
LIGHT YELLOW/LIGHT BEIGE /LIGHT RED**

Hervidor de agua / Kettle



Manual de instrucciones  
Instruction manual  
Manuel d'instructions  
Bedienungsanleitung  
Manuale di istruzioni  
Manual de instruções  
Handleiding  
Instrukcja obsługi  
Návod k použití

## 1. PARTS AND COMPONENTS

Fig. 1

1. Handle
2. Lid
3. Spout
4. Filter
5. Temperature gauge
6. Base
7. Water level gauge
8. Lever

NOTE:

The graphics in this manual are schematic representations and may not exactly match the appliance.

## 2. BEFORE USE

- This appliance is packaged in a way as to protect it during transport. Take the appliance out of its box and remove all packaging materials. You can keep the original box and other packaging elements in a safe place. This will help you prevent damage to the appliance when transporting it in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly.
- Make sure all parts and components are included and in good conditions. If there is any piece missing or in bad conditions, contact the official Cecotec Technical Support Service immediately.
- Before using the appliance for the first time, boil water twice without cleaning agents.

## 3. OPERATION

1. Remove the lid and fill the kettle with water while watching the water level gauge.
2. Place the lid on the kettle.
3. Place the kettle on the power supply base.
4. Press the lever down: the corresponding LED indicator will light up. The kettle will start boiling water. With the exterior temperature gauge, you will be able to view the water temperature at all times.
5. After boiling the water, the appliance will switch off automatically.
6. Before serving water, wait until it stops boiling.
7. Do not open the lid when serving.

**Note**

Fill the kettle between the minimum and maximum level, without exceeding the limit capacity. It is important to let the kettle cool down until the water stops boiling.

If the kettle is hot and you wish to remove the lid, use a cloth and do so carefully.

**Tip**

- Use the kettle exclusively to boil water, the use of other liquids could damage the appliance.
- It is not recommended to use hard water, as this may cause limescale build-up inside the appliance. To lengthen the appliance's shelf life, adhering limescale must be removed on a regular basis.
- If you want to use the kettle to make some tea, you can use bags or tea flowers. Make sure the contents are big enough for the filter to hold and extract the tea from the bag or flower.

**4. CLEANING AND MAINTENANCE**

- Always disconnect the plug from the mains supply before cleaning the appliance.
- If the kettle is hot, wait until it completely cools down to clean it.
- Do not immerse the appliance, its power cable, plug, or base in water.
- Do not use steam to clean the kettle.
- The interior and exterior can be cleaned with a slightly dampened cloth. Do not use powder detergent or abrasive or corrosive cleaning agents, as these could damage the appliance's surface. Rinse the kettle interior and dry it thoroughly with a soft cloth.
- Before storing the appliance, check it is completely dry and store it in a fresh and dry place.
- If you notice mineral deposits such as limescale, we recommend following the steps below:
  1. Pour water and a descaler for kitchen appliances in the ratio specified by the manufacturer.
  2. Let it stand for one hour with the appliance switched off.
  3. Discard the descaler and rinse the kettle with clean water several times until washing off all descaler residue.
  4. Fill up the kettle and boil some water, then discard it.
  5. If you notice traces of descaler, repeat from step 3.

**Warning**

Never use ammonia, chlorine or other appliances to clean or descale the kettle. These could damage the appliance. Follow only the previous steps.

5. TROUBLESHOOTING

Problem	Cause and solution
The kettle does not turn on.	Make sure the kettle is plugged to the electric circuit. Make sure the plug works. Make sure the lever was pressed down.
The kettle does not boil.	Make sure the water level is between the minimum and maximum.

6. TECHNICAL SPECIFICATIONS

Model: Thermosense 420 Vintage Inox / Thermosense 420 Vintage Light Blue / Thermosense 420 Vintage Light Green / Thermosense 420 Vintage Light Yellow / Thermosense 420 Vintage Light Beige / Thermosense 420 Vintage Light Red  
Product reference: 01481 / 01482 / 01483 / 01484 / 01485 / 01981  
Capacity: 1,8 litres  
Rated power: 1850-2200 W  
Voltage and frequency: 220-240 V ~ 50/60 Hz  
Technical specifications may change without prior notification to improve product quality.  
Made in China | Designed in Spain

7. DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC APPLIANCES



This symbol indicates that, according to the applicable regulations, the product and/or batteries must be disposed of separately from household waste. When this product reaches the end of its shelf life, you should dispose of the batteries/accumulators and take them to a collection point designated by the local authorities.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.  
Compliance with the above guidelines will help protecting the environment.

8. TECHNICAL SUPPORT AND WARRANTY

Cecotec shall be liable to the end user or consumer for any lack of conformity that exists at the time of delivery of the product under the terms, conditions, and deadlines established by the applicable regulations.  
It is recommended that repairs be carried out by qualified personnel.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact the official Cecotec Technical Support Service at +34 963 210 728.

## **9. COPYRIGHT**

The intellectual property rights over the texts in this manual belong to CECOTEC INNOVACIONES, S.L. All rights reserved. The contents of this publication may not, in whole or in part, be reproduced, stored in a retrieval system, transmitted, or distributed by any means (electronic, mechanical, photocopying, recording or similar) without the prior authorization of CECOTEC INNOVACIONES, S.L.