

BKK 3020 HB

**Hand Blender**

User Manual

**Mixeur à main**

Manuel d'utilisation

**Ручной блендер**

Инструкция по эксплуатации



**BEKO**

## **Read this manual prior to initial operation of the product!**

Dear Customer,

We hope that your product, which has been manufactured in modern facilities and passed through a strict quality control procedure, will give you very good results.

We advise you to read through this manual carefully before using your product and keep it for future reference.



This product has been produced in environmentally friendly, modern facilities



### **1 Safety and set-up** **4-5**

---

### **2 At a glance** **6-7**

---

2.1 Controls and parts ..... 6

2.2 Special features. .... 7

2.3 Technical data ..... 7

### **3 Operation** **8**

---

3.1 Preparation ..... 8

3.2 Blending ..... 8

### **4 Information** **9**

---

4.1 Cleaning and care ..... 9

4.2 Storage ..... 9

4.3 Environmental note. .... 9

# 1 Safety and set-up

Please read this instruction manual thoroughly prior to using this appliance! Follow all safety instructions in order to avoid damages due to improper use!

Keep the instruction manual for future reference. Should this appliance be given to a third party, then this instruction manual must also be handed over.

- This appliance is intended for private domestic use only and is not suitable for professional catering purposes. It should not be used for commercial use.
- The blades are very sharp! Handle the sharp blades with utmost care, especially during removing and cleaning, in order to avoid injuries.
- Never clean the appliance with bare hands. Always use a brush.
- Do not touch any moving parts of the appliance. Do not attach or remove the parts until the appliance comes to a complete stop.
- Always keep hair, clothing and any other utensils away from the appliance during operation in order to prevent injury and damages.
- Check if the mains voltage on the rating label corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to pull out the plug.
- Do not wrap the power cord around the appliance.
- For additional protection, this appliance should be connected to a household faulty current protection switch with no more than 30 mA. Consult your electrician for advice.
- Do not immerse the appliance, power cord or power plug in water or in other liquids.
- Always pull out the power plug before assembling the appliance, after using the appliance, before disassembling, before cleaning the appliance, before leaving the room or if a fault occurs. Do not disconnect the plug by pulling on the cord.
- Do not squeeze or bend the power cord and do not rub it on sharp edges in order to prevent any damage.
- Keep the cord away from hot surfaces and open flames.
- Do not use an extension cord with the appliance.
- Never use the appliance if the power cord or the appliance is damaged.
- Our BEKO Household Appliances meet applicable safety standards, thus if the appliance or power cord is damaged, it must be repaired or replaced by the dealer, a service centre or a similarly qualified and authorized service person to avoid any dangers. Faulty or unqualified repair work may cause danger and risks to the user.
- Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not leave the appliance unattended as long as it is in use. Extreme caution is advised when the appliance is being used near children and people with limited physical, sensory or mental capabilities.

# 1 Safety and set-up

- Before using the appliance for the first time, clean all parts which come into contact with food carefully. Please see details in the “Cleaning and Care” section.
- Dry the appliance and all parts before connecting it to the mains supply and before attaching the accessories.
- Do not operate the appliance without ingredients in the measuring cup or chopping bowl.
- Never place the appliance, attachments, power cord or plug on hot surfaces such as gas or electric burners or hot oven surfaces and never use with hot liquids or food. Let hot food and liquids cool down to min. 80°C or less before using the appliance.
- Do not use the appliance for anything other than its intended use.
- Never switch on the appliance for longer than necessary for processing the food.
- Never use the appliance with damp or wet hands.
- Operate the appliance with delivered parts only.
- The appliance is designed to process only common household quantities.
- Do not use the appliance if the blades are damaged or show signs of wear.
- Make sure that there is no danger that the power cord could be accidentally pulled or that someone could trip over it when the appliance is in use.
- Position the appliance in such a way that the plug is always accessible.
- A spatula may be used to remove the food from the measuring cup and chopping bowl. Make sure that the appliance is switched off before doing this.
- We do not recommend operating the appliance with dry or hard foods or for ice crushing as this may conclude in dull blades.
- Remove bones and stones from food to prevent the blades and the appliance from being damaged.

## 2 At a glance

### 2.1 Controls and parts



- A** Hanging loop
- B** Speed I button
- C** Speed II button
- D** Motor unit
- E** Blending attachment
- F** Measuring cup

Values stated on your product labels or in the documentation accompanying it are obtained in laboratory in accordance with the relevant standards. These values may change depending on operational and environmental conditions of the product.

### 2.2 Special features

The appliance is ideal for preparing sauces, dips, soups, mayonnaise and baby food; as well as for mixing drinks and milkshakes and chopping vegetables, culinary herbs, meat, fruits, nuts and cheese.

The BEKO Hand Blender BKK 3020 HB is equipped with:

- Powerful 700-watt motor
- High-quality stainless steel blender for puréeing, mixing and blending soups, sauces, mayonnaise, desserts all in a matter of seconds. Also ideal for preparing baby food
- Versatile, dishwasher safe measuring cup with 700 ml capacity.
- 2 speed settings for preparing a variety of ingredients quickly and easily

#### Note

- Your Hand Blender has been designed for processing small quantities of food and should not be used for any other purpose.

### 2.3 Technical data



This product conforms to the European directives 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU.

**Power supply:** 220-240 V~, 50/60 Hz

**Power:** 700 W

Technical and design modifications reserved.

### 3.1 Preparation

1. Remove all packaging and sticker materials and dispose of them according to the applicable legal regulations.
2. Before using the appliance for the first time, clean parts which come into contact with food (see the "Cleaning and care" section).
3. Cut the food into small pieces before processing with the appliance.

### 3.2 Blending

1. Put the food that you would like to puree or mix in the measuring cup **F** or a similar bowl.
2. Attach the blending attachment **E** to the motor unit **D** by pushing the attachment towards the motor unit **D** and turning it clockwise until it locks. Make sure the blending attachment is properly attached to the motor unit.
3. Insert the plug into the wall socket.
4. Immerse the blending attachment **E** in the measuring cup **F**, that contains the ingredients to be blended.

#### Notes

- To prevent the ingredients from splashing, do not press the Speed I button **B** or Speed II button **C** until the blending attachment has been immersed in the ingredients.
5. Press and hold down Speed I button **B** or Speed II button **C**.
    - The appliance starts operating.

#### Note

- The processing time for about 100-400 ml of baby food or soup is 20 seconds.
6. Move the appliance slowly up and down and in circles to blend the ingredients.

#### Note

- Always switch off the appliance before taking out the processed food.

7. Release the Speed I button **B** or Speed II button **C** when you are finished and disconnect the power plug from the wall socket. Remove the mixture from the measuring cup **F**.
8. Disassemble the blending attachment **E** by turning it counter clockwise and then pulling it off from the motor unit.

#### Notes

- To prevent overheating do not operate the appliance continuously for more than 10 seconds.
- Never switch on the appliance for longer than necessary for processing the food.
- To prevent overflowing of the mixture do not overfill the measuring cup **F**. Smaller amounts are easier to process.
- To prevent any accidents use the cup lid as anti-slip rubber pad.
- If you would like to use the blending attachment directly in the pot, first take the pot off the stove to prevent the blending attachment from overheating.



### 4.1 Cleaning and care

#### Caution

- Never use petrol, solvents or abrasive cleaners, metal objects or hard brushes to clean the appliance.
  - Do not touch the blades with your bare hands. The blades are very sharp. Use a brush!
  - Never put the motor unit **[D]** or power cord in water or any other liquids and never hold them under running water.
1. Turn the appliance off and disconnect it from the wall socket.
  2. Let the appliance cool down completely.
  3. Use a damp soft cloth to clean the motor unit **[D]**.
  4. Immediately after using, clean the blending attachment **[E]** with warm, soapy water and dry it thoroughly. Never wash it in the dishwasher.
  5. Only the measuring cup **[F]** can be cleaned in the dishwasher.

#### Note

- Before using or storing the appliance after cleaning, dry all parts carefully using a soft cloth.

### 4.2 Storage

- If you do not plan to use the appliance for a long period of time, please store it carefully.
- Make sure the appliance is unplugged and completely dry.
- Store the appliance in a cool, dry place.
- Make sure the appliance is kept out of the reach of children.

### 4.3 Environmental note

This product has been made from high-quality parts and materials which can be re-used and are suitable for recycling.



Therefore, do not dispose of the product with normal household waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please consult your local authorities to find out where the nearest collection point is.

Help protect the environment by recycling used products.