

# Grill

## User Manual



GRN 7182

EN | RO

01M-8833013200-1818-02

**beko**

# Please read this manual first!

Dear Valued Customer,

Thank you for preferring this Beko appliance. We hope that you get the best results from your appliance which has been manufactured with high quality and state-of-the-art technology. For this reason, please read this user manual and all other provided documents carefully before using the appliance and keep it as a reference for future use. If you hand over the appliance to someone else, give the user manual as well. Follow the instructions by paying attention to all the information and warnings in the user manual.

## Meanings of the symbols

Following symbols are used in various sections of this manual:



Important information and useful hints about usage.



Warnings for dangerous situations concerning the safety of life and property.



Warning for electric shock.



Warning for hot surfaces.



This product has been produced in environmentally-friendly, state-of-the-art facilities.

Conforms to the WEEE Directive.



It does not contain PCB.

## CONTENTS

---

ENGLISH	4-14
---------	------

---

ROMÂNĂ	15-28
--------	-------

---

This section contains safety instructions that will help protect from risk of personal injury or material damage.

Failure to follow these instructions voids any granted warranty.

## 1.1 General safety

- This appliance complies with international safety standards.
- This appliance can be used by children who are at the age of 8 and above and by people who have reduced physical, perceptual or mental abilities or by people who are deficient in terms of experience and knowledge as long as they are supervised and given the instructions regarding the safe use of the appliance and dangers encountered. Children should not play with the appliance.
- Cleaning and maintenance works should not be performed by children under the age 8.
- Keep the appliance and its power cable so that they are inaccessible by children under 8 years old.

## Important safety and environmental instructions

- If the power cable or the appliance itself is damaged, do not use it. Contact an authorised service.
- Your mains power supply should comply with the information on the rating plate of the appliance.
- For additional protection, this appliance should be connected to a household residual current device with a rating of no more than 30 mA.
- Use the appliance with a grounded outlet.
- Do not use the appliance with an extension cable.
- Prevent damage to the power cable by not squeezing, bending, or rubbing it on sharp edges.
- Do not touch the plug of the appliance with damp or wet hands.
- Do not immerse the appliance or its power cable in water.
- Do not leave the appliance unattended while it is plugged in.
- This appliance is intended only for household use and cooking; it is not suitable for professional use.

## Important safety and environmental instructions

- Exterior surface gets hot while the appliance is in use. Do not touch hot surfaces to avoid risk of burning.
- Do not leave metal cooking utensils and items on cooking plates.
- Operate and store the appliance on a stable surface.
- Do not attempt to dismantle the appliance.
- Only use the original parts or parts recommended by the manufacturer.
- Unplug the appliance before cleaning and let it completely dry after cleaning.
- Clean only the outer surface and the plates according to the instructions in the Cleaning and Care chapter.
- The appliance is not suitable for outdoor use.
- The appliance should not be operated with an external clock timer or separate remote control system.

## Important safety and environmental instructions

- Food items can catch fire due to overheating. Do not allow the appliance to get in contact or be covered with flammable items such as curtains, fabric, wall panels and etc.
- Never use the appliance in or near places where combustible or inflammable ambience or places are present.
- Charcoal or similar fuels should not be used with this appliance.
- If you keep the packaging materials, store them out of the reach of children.

## 1.2 Compliance with the WEEE Directive and disposal of the waste product



This product does not include harmful or prohibited materials specified in the "Regulation for Supervision of the Waste Electric and Electronic Appliances" issued by the Ministry of Environment and Urbanisation. This appliance conforms to the WEEE regulation. This appliance has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Therefore, do not dispose the appliance with normal domestic waste or other wastes at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. Ask the local authority in your area for these collection points. Help protect the environment and natural resources by recycling used products.

## 1.3 Package information



Package of the appliance is made of recyclable materials in accordance with our National Legislation. Do not dispose packaging materials together with domestic waste or other wastes. Take them to the packaging material collection points designated by local authorities.

## 1.4 Things to do for energy saving

Switch off and unplug the appliance after using it. Select appropriate temperatures when cooking your food.



## 2 Your electric griller

### 2.1 Overview



1. Body
2. Oil splash plate
3. Power cable entry
4. Double-sided non-stick grill surface
5. Power cable
6. On/Off and temperature adjustment button
7. Spatula
8. Oil collecting reservoir

### 2.2 Technical data

**Voltage:** 220-240 V ~, 50/60 Hz

**Power:** 1500-1800 W

Rights to make technical and design changes are reserved.

The values which are declared in the markings affixed on your appliance or other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

## 3 Usage

### 3.1 Intended use

This appliance is intended only for household use and cooking; it is not suitable for professional use.

### 3.2 Initial use

Clean all parts of the appliances with a damp sponge cloth. When using the appliance for the first time, slightly grease the grill surface.

### 3.3 Operation

1. Place the appliance on a flat and stable surface.
2. Hold the grill surface (see 3.4) you want to use so that it faces upwards and place it completely onto the body.
3. Place the oil collecting reservoir (8) in its housing which is found at the side of the appliance.



A little amount of water you add into the oil collecting reservoir (8) can reduce the some that will arise during the cooking process.



Attach the oil splash plate to the appliance if you wish to use it (see. 3.6).



**WARNING:** If the place is not seated completely, you cannot plug in the power cable.

4. Plug the power cable (5) into the cable entry.
5. Plug in the plug of the power cable to the cable entry.
6. Adjust the temperature setting button according to the food you are going to cook.
  - The indicator light will become on and it will go off once the set temperature has been reached.

## 3 Usage



The appliance will get heated again when in use in order to keep the set temperature. The indicator light will again become on and off during this process. Meanwhile, you can continue the cooking process.



The appliance will reach the desired temperature in 5-10 minutes.

7. Place the food you want to cook onto the grill surface (4).
8. When the cooking is done, take the food from the grill.



**WARNING:** Use cutlery which are wooden or made of heat-resistant plastic to turn the food or take the food from the cooking plate.

9. Set the temperature setting button to the off "0" position.
10. Unplug the appliance and wait for it to cool down.

11. When the appliance has cooled down completely, remove the power cable (5) from the appliance.
12. Remove the grill surface (4) and the oil collecting reservoir (8) from the body and clean them (see 5.1).

### 3.4 Double-sided cooking plate

You can use both sides of the cooking plate.

You can use the flat surface for food such as sliced vegetables, egg etc.

And you can use the other side for food you want to grill such as meat, steak etc.

### 3.5 Useful tips

You can grease the grill slightly if you are going to cook food such as vegetables, fish or lean meat.

If you have seasoned the meat with sauces that contain oil, use the appliance near the kitchen hood. These sauces may cause smoke.




## 3 Usage



**WARNING:** Do not touch the plate or the body when the appliance is in use.

### 3.6 Attaching the oil splash plate

1. Place the long plate onto the short plate through the connection point.
2. Attach the other short plate to the long plate in the same way.
3. Place the attached oil splash plate onto the grill.

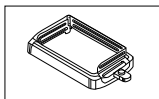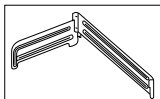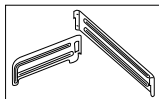

## 4 Cleaning and care

### 4.1 Cleaning

1. Switch the appliance to the off position.
  2. Wait for the appliance to cool down completely and remove the power cable.
  3. Pull up and remove the grill surface (4).
- Clean the body (1) using a sponge and dish-washing detergent. Do not immerse the appliance in water.
  - Clean the grill surface (4) and the oil splash plate (2) using a soft sponge and dish-washing detergent. You can use hot water.



**WARNING:** Never use gasoline, solvent, abrasive cleaning agents, metal objects or hard brushes to clean the appliance.

Dry all parts with a soft towel before starting to use the appliance after cleaning it.



We'd recommend you to clean your appliance after each use to keep it well-maintained.



**WARNING:** Do not immerse the power cable in water. Clean it with a damp cloth.

### 4.2 Storage

- Unplug the appliance and let it cool down before storing it.
- Please make sure that the appliance is unplugged, cooled and totally dry.
- Store the appliance in a cool and dry place.
- Make sure that the appliance and its cable are kept out of the reach of children.

## **4 Cleaning and care**

### **4.3 Handling and transportation**

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or on the packaging. The appliance may get damaged.
- Dropping the appliance may render it non-operational or cause permanent damage.