

Chopper

User Manual



CHP7504W

EN | DE | FR | TR | ES | PL | IT
RO

01M-8839733200-1118-01

beko

Please read this user manual first!

Dear Customers,

Thank you for selecting an Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Meanings of the symbols

Following symbols are used in the various section of this manual:



Important information and useful hints about usage.



WARNING: Warnings for dangerous situations concerning the safety of life and property.



Materials are intended to be in contact with food.



Do not immerse the appliance, power cord or power plug in water or in other liquids.



Protection class against electric shock



This product has been produced in environmentally-friendly, state-of-the-art facilities.

Complies with the WEEE Directive.



It does not contain PCB.
Made in P.R.C.

CONTENTS

| | |
|----------|-------|
| ENGLISH | 4-9 |
| DEUTSCH | 10-18 |
| FRANÇAIS | 19-26 |
| TÜRKÇE | 27-33 |
| ESPAÑOL | 34-41 |
| POLSKI | 42-53 |
| ITALIANO | 54-62 |
| ROMÂNĂ | 63-72 |

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Failure to follow these instructions invalidates the granted warranty.

1.1 General safety

- This appliance complies with the international safety standards.
- This appliance can be used by people who have limited physical, sensory or mental capacity or who do not have knowledge and experience, provided that they are supervised or they understand the instructions with regard to safe use of the product and potential dangers.
- This appliance cannot be used by children.
- Do not use it if the power cable, blades or the appliance itself is damaged. Contact an authorised service.
- Unplug the appliance when left unattended, while installing/removing accessories or before cleaning.
- Only use the original parts or parts recommended by the manufacturer.
- Do not attempt to dismantle the appliance.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- Do not use the appliance with an extension cord.
- Do not pull the power cable when unplugging the appliance.
- Unplug the appliance before cleaning, disassembly, accessory replacement and wait for it to stop completely.
- Do not touch the plug of the appliance with damp or wet hands.
- Do not use the device for hot food.
- Use the appliance only with the supplied rubber base and glass container.
- Do not operate the appliance without the ingredients in the bowl.
- Remove bones and stones from food to prevent the blades and the appliance from getting damaged.

Important instructions for safety and environment

- This appliance is not suitable for dry or hard foods as this will quickly cause the blades to become dull.
- To prevent overheating, do not use the appliance continuously for more than 10 seconds. Leave to cool for 1 minute in between each 10 seconds of operation.
- Follow all warnings to prevent injuries due to incorrect use.
- When emptying the container, during cleaning and grabbing chopping blades with bare hands serious injuries could result due to incorrect use. Use caution and hold the chopping blade only from its plastic section.
- After cleaning, dry the appliance and all parts before connecting it to mains supply and before attaching the parts.
- Do not immerse the appliance, power cable, or power plug in water or any other liquids.
- Do not operate or place any part of this appliance or its parts on or near hot surfaces.
- If you keep the packaging materials, store them out of the reach of children.
- Keep the appliance out of the reach of children.

1.2 Compliance with the WEEE Directive and Disposing of the Waste Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

1.3 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.4 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

2 Chopper

2.1 Overview



1. Operation switch
2. Base unit
3. Inner lid
4. Upper blade
5. Bowl
6. Fixed shaft
7. Lower blade
8. Anti-slip rubber pad

2.2 Technical data

Power supply: 220-240 V~, 50-60 Hz

Power: 500 W

Technical and design modifications reserved.

The values which are declared in the markings affixed on your appliance or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

3 Recipe idea

3.1 Recipe idea Salsa

Ingredients:

- 3 tomatoes, seeded
- 1 red onion
- 1 garlic clove
- 1 red bell pepper
- 1 jalapeño chilli pepper, seeded
- 2 tablespoons fresh cilantro
- ½ teaspoon salt

Preparation:

Peel the onion and place with the garlic, bell pepper and chilli pepper into the bowl of the appliance and pulse until the ingredients are coarsely chopped. Gradually add the tomatoes, cilantro and salt and pulse a few times until the ingredients are thoroughly mixed.

4 Operation



Your chopper has been designed for processing small quantities of food and should not be used for any other purpose.



Do not chop extremely hard ingredients such as coffee beans, nutmeg, grains, ice or bones. Remove stalks from herbs, shells from nuts and bones, tendons and gristle from meat.



The appliance should be unplugged when not in use.

4.1 Preparation

1. Remove all packaging and sticker materials and dispose of them according to the applicable local regulations.
2. Before using the appliance for the first time, clean the appliance (See the "Cleaning and care" section).
3. Cut the food into small pieces before using the appliance.

4.2 Chopping



CAUTION: Do not touch the chopping blade with your bare hands.

1. Place the upper blade (4) over the lower blade (7) and then place the spindle (6) on the plastic bowl (5).
2. Put the food that you would like to prepare in the bowl (5).
3. Put the inner lid (3) onto the plastic bowl (5) and make sure that it is fully seated.
4. Mount the base unit (2) on the inner lid (3) on the bowl (5).
5. Insert the plug into the wall socket.
6. Press and hold the operation switch (1).
 - The appliance starts operating.



You can press the operation switch (1) intermittently to activate the "PULSE" function of the appliance. You can obtain a better quality of chopping with the "PULSE" function.

4 Operation

7. Release the operation switch (1) to finish the operation. Disconnect the plug from the wall socket.



Do not operate the appliance continuously for more than 10 seconds.

8. Remove the base unit (2) and the inner lid (3). Take out chopping blade (4) carefully. Remove food from the glass bowl (5).



CAUTION: Do not touch the blade with your bare hands. The blade is very sharp.

4.3 Maximum quantities and processing time

Refer to the table for processing time and maximum quantities.

| Ingredients | Maximum quantity |
|-----------------------------------------------|------------------|
| Meat (diced) | 100 - 150 g |
| Cheese (cut into small cubes) | 100 - 150 g |
| Onions/Garlic (peeled & cut into 8 pieces) | 150 - 200 g |
| Tomato (cut into 6 pieces) | 250 - 300 g |
| Fruits/Vegetables (cut into 8 pieces) | 250 - 300 g |

5 Information

5.1 Cleaning and care



CAUTION: Never use petrol solvents, abrasive cleaners, metal objects or hard brushes to clean the appliance.



CAUTION: Do not touch the chopping blade with your bare hands. The blades are very sharp. Use a brush!

1. Turn the appliance off and disconnect it from wall socket.
2. Let the appliance cool down completely.
3. Use a soft damp cloth to clean the exterior of the base unit (2) and then wipe it dry.
4. The bowl (5), upper blade (5), lower blade (7) and inner lid (3) can be washed in the dishwasher on the upper shelf.
5. Before storing, clean and dry the upper blade (5) and lower blade (7).



CAUTION: Never put the base unit (2) or power cord in water or any other liquids and never hold them under running water.



Before using the appliance after cleaning, dry all parts carefully using a soft towel.

5.2 Storage

- If you do not plan to use the appliance for a long period of time, please store it carefully.
- Make sure the appliance is unplugged, cooled down and completely dry.
- Do not wrap the power cord around the appliance.
- Store it in a cool, dry place.
- Make sure the appliance is always kept out of the reach of children.

5.3 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or the packaging. The appliance may be damaged.
- Dropping the appliance will render it non-operational or cause permanent damage.