

cecotec

GRANDHEAT 2300 FLATBED TOUCH WHITE/BLACK

Microondas sin plato/

Microwave without turntable



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Instrukcja obsługi
Návod k použití

1. PARTS AND COMPONENTS

Fig. 1.

1. Control panel
2. View window
3. Door
4. Safety lock system

Control panel

Fig. 3.

1. Microwave
2. Clock
3. Weight defrost
4. Increase
5. Decrease
6. Time defrost
7. Timer
8. Stop/Clear
9. Start/+30SEC/Confirm

2. BEFORE USE

Take the product out of the box. If the microwave has a protective film, tear it off before starting operation. Check carefully if there is any damage, and if there is, immediately notify the Technical Support Service.

The product must be placed on a flat, stable and dry place and kept away from corrosive materials, heat and humidity, such as gas burners or water.

The product must be placed in such way that the plug is accessible and must ensure an effective grounding in case of leakage in order to avoid electric shocks.

The microwave door must be closed in order to operate.

In case there is any manufacturing rests in the microwave cavity or on the heating elements, leave the microwave open to ensure good ventilation. In such case, it is recommended to heat a glass of water at high power for several times.

Warning: Do not remove the light brown mica cover that is attached to the microwave cavity to protect the magnetron.

3. PRODUCT INSTALLATION

Countertop installation

Place the appliance on a flat, stable surface.

ENGLISH

Fig. 2.

The minimum installation height is 85 mm.

The rear surface of appliance shall be placed against a wall.

Leave a minimum clearance of 30cm above the microwave, a minimum clearance of 20 cm is required between the microwave and any adjacent walls.

Do not remove the legs from the bottom of the microwave.

Blocking the intake and/or outlet openings can damage the microwave.

Place the microwave as far away from radios and TV as possible. Operation of microwave may cause interference to your radio or TV reception.

Plug the appliance into a power supply.

Warning: Do not install microwave over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the microwave could be damaged, and the warranty would be void.

4. OPERATION

Clock setting

When the device is plugged in, it will beep once.

Tap the clock icon to set the time. The hour digits will blink.

Tap "+" or "-" to set the desired hour, from 00-23.

Tap the clock icon. The minutes digits will blink.

Tap "+" or "-" to set the desired minutes, from 00-59.

Tap the clock icon to save the time settings.

Note:

If the clock is not set, the current time will not be displayed when the device is turned on.

During the process of clock setting, press " STOP/CLEAR ", to go back to the previous status automatically.

Timer

Tap the timer icon, the display will show 00:00.

Tap "+" or "-" to set the desired cooking time. The maximum time is 95 minutes.

Tap the Start/+30sec/Confirm icon to confirm.

When the set time is over, the device will beep 5 times.

Note: If the clock has been set (24-hour system), the display will show the current time.

Microwave cooking

Tap the microwave icon once. "P100" will be displayed on the screen.

Tap the microwave icon several times or use "+" and "-" to select the microwave power, from P100 to P10.

Tap the Start/+30sec/Confirm icon to confirm.

Tap "+" or "-" to set the desired cooking time. The set time should be 0:05-95:00.

Tap the Start/+30sec/Confirm icon to start cooking.

0---1 min: 5 seconds

1---5 min: 10 seconds

5---10 min: 30 seconds

10---30 min: 1 minute

30---95 min: 5 minutes

Microwave power chart

| Press | 1 time | 2 times | 3 times | 4 times | 5 times |
|-----------------|--------|---------|---------|---------|---------|
| Microwave power | P100 | P80 | P50 | P30 | P10 |

Weight defrost

Tap the Weight defrost icon, the display will show "dEF1".

Tap "+" or "-" to set the desired defrost time.

Weight must be from 100 to 2000 grams.

Tap the Start/+30sec/Confirm icon to start the defrost process.

Time defrost

Tap the Time defrost icon, the oven will display "dEF2".

Tap "+" or "-" to set the desired defrost time.

The maximum time is 95 minutes.

Tap the Start/+30sec/Confirm icon to start the defrost process.

Express cooking

In standby mode, tap the Start/+30sec/Confirm icon to operate the appliance at 100 % power level for 30 seconds. Each touch on the same icon will increase the cooking time by 30 seconds. The maximum time is 95 minutes.

Tap "-" to adjust the cooking time. After setting the cooking time, tap the Start/+30sec/Confirm icon to start cooking at 100 % power level.

During operation, each touch on the same icon will increase the cooking time by 30 seconds.

Note: This option is not available under Weight defrost or Auto menu cooking modes.

Multi-sequence cooking

ENGLISH

A maximum of 2 sequences can be set for a cooking process. If one of the sequences included is defrosting, it should be set as the first one.

Note: Auto menu and Express cooking menu cannot be set as one of the multi-sequences.

Example: Defrost food for 5 minutes, then cook with 80 % microwave power for 7 minutes.

Tap the Weight defrost icon, the display will show "dEF2".

Tap "+" or "-" to set 5 minutes of defrost time.

Tap the Microwave icon twice to select 80 % microwave power.

Tap the Start/+30sec/Confirm icon to confirm.

Tap "-" to adjust the cooking time to 7 minutes.

Tap the Start/+30sec/Confirm icon to start cooking.

Checking settings

During operation, tap the Microwave icon, the current power level will be displayed for 3 seconds.

During operation, tap the Clock icon, the current time will be displayed for 3 seconds.

Child lock system

In standby mode, tap the Stop/Clear for 3 seconds. The device will emit a long beep indicating this function has been activated.

The current time will be displayed if the clock is set. The following icon will also be displayed: Fig. 4.

In standby mode, tap the Stop/Clear for 3 seconds. The device will emit a long beep indicating this function has been deactivated.

Auto menu

In standby mode, tap the "+" icon to select the Auto menu function.

Tap "+" or "-" to set the desired menu.

Tap the Start/+30sec/Confirm icon to confirm the menu.

Tap "+" or "-" to select the food weight.

Tap the Start/+30sec/Confirm icon to start cooking.

Menus:

| Menu | Weight | Display |
|--------------|--------|---------|
| A-1 Pizza | 200 g | 200 |
| | 400 g | 400 |

| | | |
|------------------|-------------------------------|-----|
| A-2 Meat | 250 g | 250 |
| | 350 g | 350 |
| | 450 g | 450 |
| A-3 Vegetable | 200 g | 200 |
| | 300 g | 300 |
| | 400 g | 400 |
| A-4 Pasta | 50 g (with 450 g cold water) | 50 |
| | 100 g (with 800 g cold water) | 100 |
| A-5 Potato | 200 g | 200 |
| | 400 g | 400 |
| | 600 g | 600 |
| A-6 Fish | 250 g | 250 |
| | 350 g | 350 |
| | 450 g | 450 |
| A-7 Beverage | 1 cup (120 ml) | 1 |
| | 2 cups (240 ml) | 2 |
| | 3 cups (360 ml) | 3 |
| A-8 Popcorn | 50 g | 50 |
| | 85 g | 85 |
| | 100 g | 100 |

5. CLEANING AND MAINTENANCE

The device, as well as food rests, must be cleaned and removed regularly.

Unplug the cable from the power supply before starting the cleaning. Do not immerse the product in water or any other fluid during cleaning.

The lack of maintenance and cleaning of the product may cause a deterioration on its surface and affect its lifespan.

Do not use strong detergents, powder abrasives or metal brushes to clean the device.

Do not remove the mica plate.

When the microwave has been used for a long time, some strong odours may arise from inside.

ENGLISH

In order to get rid of them, follow one of the steps below:

Place several lemon slices in a cup and heat them at high power for 2 or 3 minutes.

Place a cup of red tea inside the microwaves and heat it at high power for 2 or 3 minutes.

Place orange peels inside the microwaves and heat it at high power for 1 minute.

Use a dampened soft cloth to clean enclosures, door, interior walls and the door frame.

Warning: All maintenance tasks must be strictly carried out by qualified technical personnel.

6. TROUBLESHOOTING

| Problem | Cause | Solution |
|-----------------------------|--|--|
| The device does not turn on | The power cord is not plugged in properly. | Disconnect it and connect it again after 10 seconds. |
| | Fuse blow or short circuit. | Contact the Technical Support Service of Cecotec. |
| | Faulty power outlet. | Test the power outlet with a different appliance. |
| The device does no heat | Door not closed properly. | Close the door properly. |

7. TECHNICAL SPECIFICATIONS

01359 GrandHeat 2300 Flatbed Touch White

01360 GrandHeat 2300 Flatbed Touch Black

Rated input power: 1270 W

Rated output power: 800 W

230 V ~ 50 Hz

Capacity: 23L

Made in China | Designed in Spain

8. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimise the recovery and recycling

of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

9. TECHNICAL SUPPORT AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.

The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.

Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.