

Grands crus au verre

DVV4 / DVV6 / DVV6SS / DVV8



Veuillez lire attentivement cette notice avant d'installer et d'utiliser votre appareil. Veuillez conserver cette notice.

I - GENERAL SAFETY INSTRUCTIONS

Before use, please read and follow the safety rules and operating instructions in this manual.

Firstly, we would like to thank you for choosing our products and hope that this appliance will fully live up to your expectations.

This appliance enables you to store your bottles or bring them to service temperature (depending on the bottles) thanks to its wide adjustment range.

For your own safety and for the proper utilization of the appliance, read this manual carefully, including the warnings and recommendations, before installing the appliance and using it for the first time. In order to avoid damage to the appliance and/or personal injury, persons using the appliance should be fully familiar with its operation and safety functions. Keep these recommendations close to the appliance, for future reference, and ensure that the document is transferred with the appliance, if it is sold or in the case of moving. This will ensure optimum operation of the appliance.

To avoid any risk of injury, keep this manual. The manufacturer declines any liability whatsoever in the case of operating/handling errors concerning the appliance.

Safety of children and other vulnerable persons

- This appliance may be used by children aged 8 years and above, and by persons who are physically, sensorially or mentally handicapped, or who have not learned to use the appliance, providing they are supervised by a person familiar with the appliance and who is aware of the risks involved. Children should not be allowed to play with the appliance. User cleaning and servicing operations should not be carried out by children, unless they are more than 8 years old and are supervised.
- Keep all packaging out of the reach of children, as there is a risk of suffocation.
- If you decide to scrap the appliance, disconnect it from the wall socket, cut the connection cable (as close to the appliance as possible) and remove the door, in order to prevent children playing with it, with the resulting risk of electric shock.
- Keep the appliance and its power cable out of reach of children less than 8 years old.

General safety

CAUTION — This appliance is designed for home use.

CAUTION — Never store inflammable substances, such as aerosols, inside the appliance, as they could leak or release fluids.

CAUTION — A damaged power cable should be immediately replaced by the manufacturer or by a qualified retailer, in order to avoid any risk of electric shock.

CAUTION — Keep the ventilation openings well open and ensure that air can circulate, especially if the appliance is recessed into a wall.

CAUTION — Do not damage the refrigerating circuit.

CAUTION — Do not use electrical appliances inside the compartment, unless they are tolerated by the manufacturer.

CAUTION — The refrigerating and insulating systems contain inflammable gases. When the appliance is scrapped, it should be deposited at an accredited collection center. Do not expose the appliance to fire.

CAUTION — Risk of child entrapment and suffocation. Before you throw away this or an old unit, take off the door, the reducing valve, gas cartridge. Leave the shelves in place, so that children may not easily climb inside.

CAUTION - Gas cartridge contents under pressure. Do not puncture or incinerate. Keep away from heat and out of direct sunlight. Keep away from sharp objects that could puncture chamber. Do not store in an enclosed vehicle. Do not discharge towards face or body. **KEEP OUT OF REACH OF CHILDREN.**

CAUTION - The gas cartridge inflation pressure should not more than 12MPa.

CAUTION - The gas cartridge should not be stored exceed 60°C, should not be exposed to the sun.

Refrigerating fluid

The refrigerating circuit in the appliance uses refrigerating isobutane (R600a), which is a highly inflammable natural gas and is therefore dangerous for the environment. When transporting or installing the appliance, ensure that no element of the refrigerating circuit is damaged. The refrigerating fluid (R600a) is inflammable.

Caution: Fire rise

If the refrigerating circuit is damaged:

- Avoid open flames or any source of combustion.
- Ensure that the room in which the appliance is installed is well ventilated. It is dangerous to change the specification of the appliance in any way whatsoever.

Damage to the power cable may cause a short circuit and/or electric shock.

Electrical safety

- We decline any liability in respect of incidents caused by poor electrical installation.
- Do not extend the power cable. Do not use an extension cable, or adapter, or multi-way socket.
- Check that the wall socket is not damaged. A wall socket in poor condition may cause the appliance to overheat and explode.
- Check that the wall socket used for the appliance is properly accessible.
- Never pull on the main power cable.
- Ensure that the appliance is always electrically earthed.
- If the wall socket is loose, do not connect the cable, as there is a risk of electric shock or fire.
- Do not use the appliance if the interior lighting cover is not installed.
- Disconnect the appliance before replacing the lighting bulb.
- The appliance operates on a single phase 220~240 V / 50 Hz powersupply.

- The appliance must be connected to an earthed wall socket, in accordance with applicable recommendations.
- Do not attempt to replace a damaged power cable, contact your after-sales service.
- The power socket must be easily accessible but out of reach of children.
- In case of doubt, contact your installation technician.

Daily utilisation

- Do not store inflammable substances or fluids inside the appliance. This would create a risk of explosion.
- Do not operate other electrical equipment inside the appliance (mixers, whirling rotor for ice cream, etc.).
- When disconnecting the appliance, grip the plug firmly and do not pull on the cable.
- Do not expose the appliance to direct sunlight.
- Keep the appliance away from candles, luminaries and open flames, in order to avoid fire risk.
- This appliance is only designed to store wines and drinks.
- The appliance is heavy. Be careful when moving it.
- If your appliance is equipped with castors, remember that these are only designed to facilitate minor movements. Do not move the appliance over long distances.
- Do not lean or climb on the appliance or its elements.
- In order to avoid falling objects and to prevent damage to the appliance, do not overload the compartments of the appliance.

Caution! Cleaning and servicing

- Before carrying out servicing, switch off the power supply and disconnect the appliance.
- When cleaning the appliance, do not use metal objects, steam systems, volatile fluids, organic solvents or abrasive substances.
- Do not use sharp or pointed objects to remove ice. Use a plastic Scraper.

Important information concerning installation!

- To ensure proper electrical connection, follow the recommendations given in the present manual.
- Unpack the appliance and visually check that it is not damaged. Do not connect a damaged appliance. Inform your retailer or point of sale of any damage. In such a case, keep the packaging.
- It is recommended that the appliance be allowed to settle for at least 4 hours before connecting the electrical power supply, so that the compressor fluid feed is correct.
- Proper air circulation is necessary to avoid overheating. To ensure sufficient ventilation, observe the installation recommendations Provided.
- In order to avoid fire risk, wherever possible, ensure that the appliance is not in contact with walls or with any hot element (compressor, condenser). Observe the installation recommendations.
- The appliance should not be placed close to radiators or cooking hot plates or gas rings.
- Check that electrical sockets remain accessible when the appliance is Installed.

Power saving

To limit the electricity consumption of your appliance:

- Install it in an appropriate place (see “Installing your appliance”).
- Leave the doors open as little time as possible.
- Regularly inspect the door seals and ensure that they are still closing properly. If this is not the case, contact your after-sales service.

Trouble shooting

- Any electrical work should be carried out by a qualified and skilled technician.
- The appliance should be repaired by an accredited repair center, using only manufacturer's original spare parts.



R600a

Safety instructions



Caution: Do not obstruct the ventilation grills on the appliance.



Caution: Do not store explosive substances, such as aerosol cans containing an inflammable propellant, in the appliance.



Caution: Do not damage the refrigerating circuit in the appliance.



Caution: The refrigerating units use isobutane (R600a), and should not be placed close to ignition sources (for example, electrical contacts that are exposed or open contacts that could be closed by the refrigerating fluid in the event of a leak). The refrigerating fluid type is specified on the power cabinet identification plate.




Caution: Do not use electrical equipment in the compartments of the appliance, unless they are of the type recommended by the manufacturer.

This appliance meets the requirements of all applicable European directives and their amendments.



II – PRODUCT DESCRIPTION

- This refrigerated wine dispenser displays, stores and dispenses 6 opened wine bottles, keeping them fresh from oxidation for up to 30 days, through use of noble gas such as nitrogen or argon.
- Quiet, high-output compressor system with automatic defrost maintains wine at the proper storing and serving temperature, between 7°C and 18°C.
- The compact design with touch-buttons gives the modern attraction.
- The environmental plastic parts, sanitary stainless-steel spout and electronic valves keep wines clean and prevent any drips from spouts.
- A white LED digital temperature controller allows you to set the desired temperature for white or red wines easily.
- Easily dispense a perfect glass of wine at any time with just the touch.

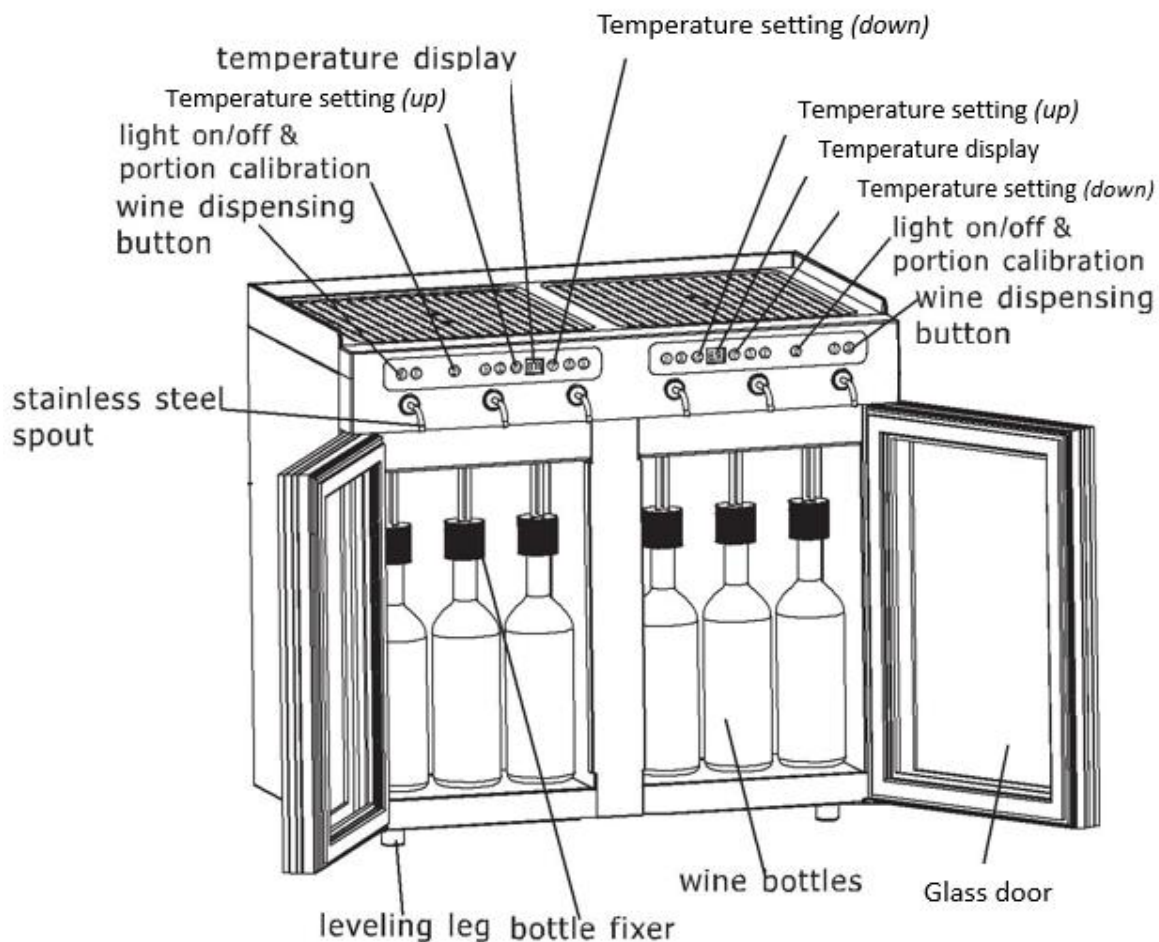

III - INSTALLATION INSTRUCTION

Before using your unit

- Remove all packing material before using your wine dispenser. Check to be sure the appliance is in good condition.
- Use a soft, dry cloth to wipe down the outside of the wine dispenser thoroughly.
- Before connecting your wine dispenser to the power source, let the unit stand upright for 24 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.



Locating your unit

- The wine preserver - dispenser is designed for free - standing installation only.
- It is recommended that this unit be kept in a location with an ambient temperature range of 16°C - 38°C. Not intended for garage or basement installation.
- Place your wine dispenser on a solid, level surface (other than carpet). This will ensure vibration and noise - free operation. Use the adjustable legs to ensure that the unit is level.
- Leave a 5 - inch clearance on all sides of the unit. This is to ensure proper circulation.

IV - OPERATING YOUR WINE DISPENSER

Loading / unloading inert gas cartridge

1. Open the upper back-panel. (see diagram, as shown at the arrow, picture 1.)
2. One hand grasp gas cartridge turns to certain angle in order to disboard empty gas bottle. (See diagram, as shown at the arrow, picture 2.)
3. Take the gas bottle/cartridge out of gripper introrsely. With one hand holding the decompression valve and with the other holding cartridge, unscrew the cartridge, take it away. (See diagram, picture 3.)
4. To insert new cartridge, first carefully line up the screw end of the cartridge to the redactor cartridge mouth and screw into place. (See diagram, picture 2.)
5. Note: It is normal for some gas to escape while screwing on cartridge. Make sure you screw cartridge in completely/tightly.
6. Check to make sure bottle/cartridge is secure.
7. Clip gas cartridge to cylinders clip
8. Shut the upper back-panel down.
9. Open wine out valve.

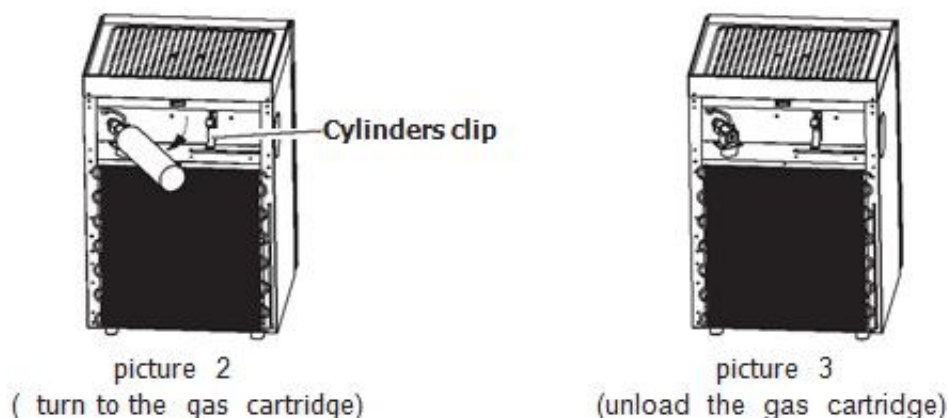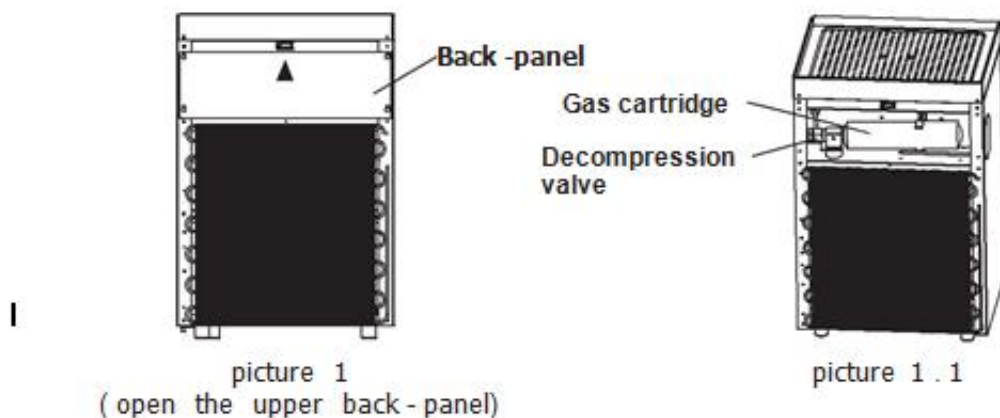


Attaching / removing wine bottles

1. Unscrew lower part of bottle fix nut and place it on the neck of desired wine bottle. 2. Slide bottle upward, with gas and wine tube inside the bottle.
2. Fit bottle mouth into silicon plug. If bottle mouth is larger, lift upper part of bottle fix nut to free silicon plug completely and ease bottle mouth into the silicon plug first.
3. Tighten lower part of bottle fix nut to the upper part.
4. Press the dispensing button to allow wine out and check to see if gas leakage will occur. (Reconnect tighter if needed so gas does not escape.)
5. Place wine fully in refrigerated cabinet and close door.

Dispensing wine

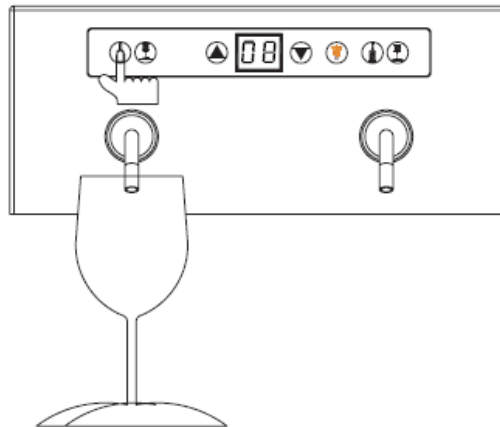

- Press and hold the wine dispensing button to dispense the selected wine into your glass, and release the button to stop dispensing. Wait until no wine dripping from spout.






Front panel commands






There are two possibilities to serve wine by the glass:



- By pressing on the  button: and the wine comes out continuously until you release the button.
- By pressing on the  button: a dose of 20 ml comes out automatically. By pressing 2 times, 40ml, pressing 3 times 60ml etc ... you do not have to stay pressed, just press the number of times wanted. The unit takes about 1 to 2 seconds to get the wine out.

It is possible to change the value of a dose; the factory setting is 20ml. Press the arrow  until the "H2" symbol is displayed and flashes. Use the  and  arrows to adjust your flow.

Setting the temperature - H1

To adjust the temperature between 7 and 18°C, press the key temperature setting  when the H1 code is displayed, tap and hold until the temperature flashes. Then adjust the temperature by using the arrows to lower press . If instead you want to increase the set temperature press  until the desired temperature. The temperature setting is now complete.

Adjusting the amount of H2 wine

To adjust the amount of wine a dose, press the temperature setting button and hold until the H2 code is displayed, tap and hold until the value flashes. You can adjust the amount between 1 and 99, the unit being ml. As for the temperature, adjust by using the  and  arrows.

Other parameters H3, H4, H5 and H6

These parameters are used to calibrate the quantities of wine served on each faucet. For example, for a dose adjusted to 20 ml H2, H3 if you increase the value of the amount to be released on the first tap will be greater than 20ml. We advise you not to change the factory settings on these 4 advanced settings.

Lighting

Turn on / off the LED lighting by pressing the corresponding LED .



V – CARE AND MAINTENANCE

Important : always unplug your wine dispenser before cleaning or performing maintenance.

Never use harsh cleansers or scouring pads to clean any part of the wine dispenser.

Cleaning

To clean the bottle fixer and solenoid valve :


- Fill a bottle with clean warm water and place the bottle-fixer into the bottle.
- Press and hold the  button to dispense the warm water. Press portion button  5 times and then hold it until the display shows “CL” and flashes, the automatic clean will start.
- Continue to dispense and flush the system until dry gas comes from the spout.

VI – TROUBLESHOOTING

Problem	Causes	Solution
<i>Nothing appears on the display.</i>	<ul style="list-style-type: none">▪ No power supply▪ You did not press the switch▪ Malfunction at the outlet▪ No electricity at plug	<ul style="list-style-type: none">▪ Make sure the device is plugged in▪ Press the switch▪ Change the plug▪ Find the reason why there is no electricity
<i>The compressor works but there is no refrigeration.</i>	<ul style="list-style-type: none">▪ Check that there is no refrigerant leak	<ul style="list-style-type: none">▪ Have a refill of refrigerant by the SAV
<i>Refrigeration is too weak.</i>	<ul style="list-style-type: none">▪ Low voltage▪ Unsuitable room temperature, reduced refrigeration effects▪ Leak in the refrigerant circuit▪ Fans do not work	<ul style="list-style-type: none">▪ Increase the tension▪ Place the device at least 150mm from the wall▪ Detect the leak and make a refill of refrigerant▪ Replace the fan

VII - ENVIRONMENT

This appliance is marked according to the European directive 2012/19/CE on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

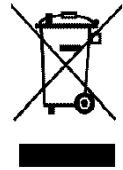

The symbol on the product, or on the documents accompanying the product, the Crossed Out Wheelie Bin, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or, if you are buying an equivalent product, to the retailer of the new product.

The user is responsible for taking the appliance to the appropriate collection center at the end of its useful life. Selective and appropriate collection for the recycling of no longer used appliances and their disposal and destruction in an environmentally friendly manner, helps to prevent potential negative effects on the environment and health, and encourages the recycling of materials used to make the product.

For more detailed information about treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the retailer where you purchased the product.

VIII - WARNING

As we continuously improve our products for the benefit of our customers, we reserve the right to modify technical characteristics without notice.

Warranties for LA SOMMELIERE brand products are offered exclusively by selected retailers. No part of these instructions may be considered as a supplementary guarantee.

FRIO ENTREPRISE cannot be held liable for errors or technical or editorial omissions in this document.

Non-binding document.