



NOTE

1) Height of the product can be adjusted by the help of adjustable feet (front and back) to fit the furniture niche height (B).


2) Do not operate this appliance until it has been installed in the furniture.

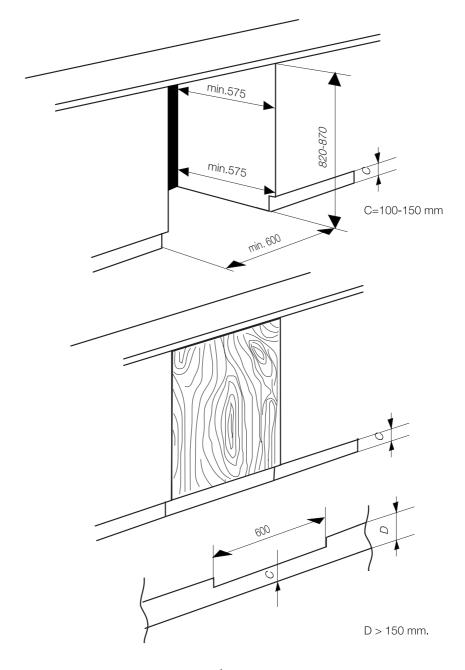

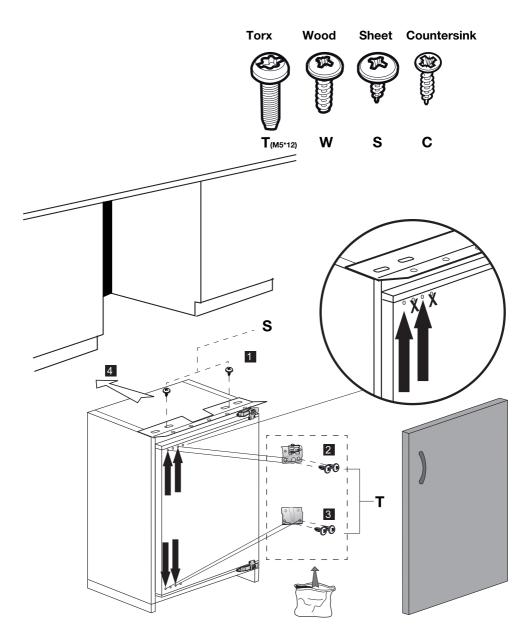


Note: Installation step for 2, screws for connecting the top plastic part should not be fully tightened until final left-right adjustment.


E = 3 mm is recommended.

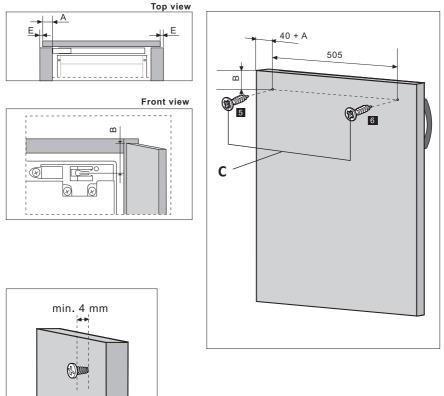


Note:

- 1. These dimensions are valid for products, which are hinged on right hand side.
- 2. When door opening direction is reversed, mirror image of this instruction should be considered. That is, dimensions should be considered for opposite sides.

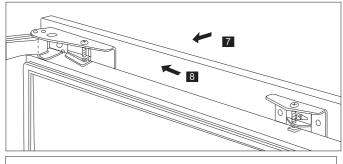

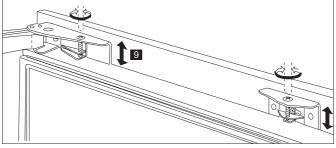

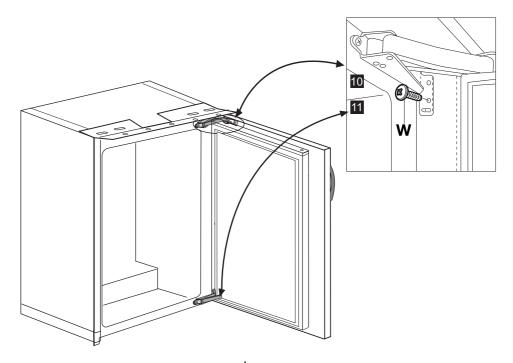

19 EN

