 


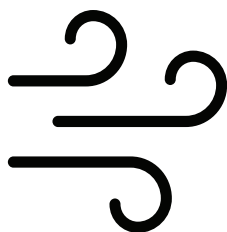

## **Air Circulation Fan**

User Manual



EFS 7000 CW

**EN - IT**



01M-8506993200-5023-01

# CONTENTS

---

<b>ENGLISH</b>	<b>03-16</b>
<b>ITALIANO</b>	<b>17-32</b>






# Please read this user manual first!

Dear Customer,

Thank you for preferring a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

## Meanings of the symbols

Following symbols are used in the various section of this manual:

	Important information or useful hints about usage.
	Warning for hazardous situations with regard to life and property.
	Warning for electric shock.
	Warning for danger of fire.
	Electrical insulation class

# 1 Important safety and environmental instructions

This section includes safety instructions that will help ensure the protection from risks of personal injuries or materialistic damages. Failure to follow these instructions shall void the warranty.

## 1.1 General safety

- This appliance complies with international safety standards.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Be extremely careful when using the device near children and people with limited physical, emotional, or mental capacity.
- Do not leave the appliance unattended while it is in use.
- Unplug the appliance before changing its location.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses
  - By clients in hotels, and other residential type environments;
  - Bed and Breakfast type environments.

# 1 Important safety and environmental instructions

- If electrical cord or if the product is damaged, the product If dropped, if there is any sign of visible damage or if it doesn't work properly, if the device appliance electrical parts are visibly damaged if the product is left in outdoor conditions or submerged in water. If it has fallen, do not use it. Contact the authorized service.
- While the product is running never place your fingers or never insert a pen or similar items into the ventilator or inside the grill section.
- Before connecting it to power and mounting its parts, dry the product and all the parts of it.
- Always use the appliance on a balanced, flat, clean, dry and non slip surface.
- Do not use this product outdoors or in the bathroom.
- Do not use the device near the window. Exposure to rain can create the risk of electric shock.
- Keep all the packaging materials away from children.
- The device must shake-free start and stop. Provide device horizontally and on solid ground to stay balanced.
- Do not pinch the power cord of your appliance indoors, do not keep it in contact with sharp edges and corners, keep the power cord away from heat sources and wet areas. The power cable must remain in a free state at all times.
- Never operate any part of this appliance on or near hot surfaces such as gas stoves, electric stoves or heated ovens or place it on these surfaces.

# 1 Important safety and environmental instructions

- Do not touch the appliance or its plug when your hands are damp or wet.
- Before connecting to electricity and before attaching its parts dry the device and all parts.
- Do not use this product with an extension cable.
- Connect the appliance to a grounded socket.
- During the use of the appliance and the the power cable accidental withdrawal or to someone's cable tripping hazard, make sure it doesn't.
- Make sure that your mains power supply on the rating plate of the product is in compliance with the specified information.
- Do not immerse the device into water to clean it.
- Do not cover or block the product with any material.
- Definitely make sure not to have gas products containing flammables and explosives Ingredients near your product.
- Place the this appliance in a shady area away from the electronics and valuables such as TV, CD player or music system.
- Please do not use any part of product as support replacement support or as a stepping tool use.
- The use of additional parts in your device is not recommended and may cause danger.
- This appliance should not be operated together with an external timer or a separate remote control system.
- Be careful that your fans air inlet and any of its outputs not to be blocked by objects installation of the fan.

# 1 Important safety and environmental instructions

- Be careful that your fans air inlet and any of its outputs not to be blocked by objects.
- Do not put or spray any liquid into the product.
- When unplugging your device from the power cord, pay attention not to carry by pulling or holding from the power cord. When unplugging, be sure hold the plug and do not pull towards the cable.
- Do not operate or use your fan in flammable and/or or at risk of explosion of near items.

## 1.2 Compliance with the WEEE Directive and Disposing of the Waste Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

## 1.3 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

# 1 Important safety and environmental instructions

## 1.4 Package Information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes.

Take them to the packaging material collection points designated by the local authorities.

## 1.6 Information on waste batteries



This symbol on rechargeable batteries/batteries or on the packaging indicates that the rechargeable battery/battery may not be disposed of with regular house hold rubbish. For certain rechargeable batteries/batteries, this symbol may be supplemented by a chemical symbol. Symbols for mercury (Hg) or lead (Pb) are provided if the rechargeable batteries/batteries contain more than 0,0005 % mercury or more than 0,004 % lead.

 
Rechargeable batteries/batteries, including those which do not contain heavy metal, may not be disposed of with household waste. Always dispose of used batteries in accordance with local environmental regulations. Make enquiries about the applicable disposal regulations where you live.

## 1.7 Batteries instructions

1. Slide open the battery compartment cover located on the backside of the remote controller.
2. Remove the batteries from the battery compartment.
3. Insert two new AAA 1,5 V batteries in the battery compartment with putting attention on the polarities (+ and -) marked on the battery and the battery compartment.
4. Slide close the battery compartment cover, Make sure it locks in place.
5. Non-rechargeable batteries are not to be recharged
6. Different types of batteries or new and used batteries are not to be mixed
7. Batteries are to be inserted with the correct polarity
8. Exhausted batteries are to be removed from the appliance and safely disposed of
9. If the appliance is to be stored unused for a long period, the batteries are removed
10. The supply terminals are not to be short-circuited



## 2 Part figure

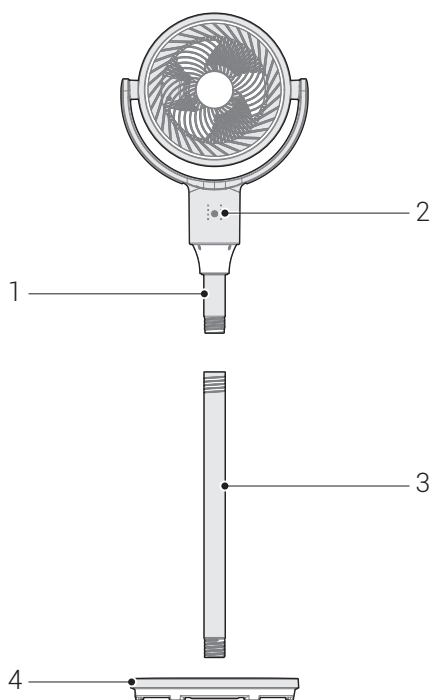

### 2.1 Control and parts

1. Stationary post of head
2. Display
3. Internal pole
4. Chassis

### 2.2 Technical data

**Power supply** : 220-240 V~, 50 Hz

**Power** : 30 W

Technical and design modifications reserved.

Values stated on the markings on the product or in the printed materials supplied with the product are the values obtained in laboratory in accordance with relevant standards. Such values may vary depending on the usage of the product and the ambient conditions.

 
## 2 Part figure

Information			
Description	Symbol	Value	Unit
Maximum fan flow rate	F	55.3	m3/min
Fan power input	P	30	W
Service value	SV	1.11	(m3/min)/W
Standby power consumption	P <sub>SB</sub>	0	W
Fan sound power level	L <sub>WA</sub>	63	dB(A)
Maximum air velocity	c	2.83	meters/sec
Measurement standard for service value	IEC 60879:1986+(corr, 1992)		
Contact details for obtaining more information	Arçelik A.S. Sutluce, Karaagac Cad. No: 2-6 34445 İstanbul/Türkiye		

## 3 Installation


### 3.1 Chassis mounting

Align the chassis and the base interface, and rotate clockwise to tighten it.

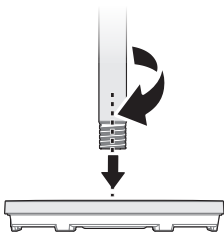

### 3.2 Chassis Pole mounting

 Align the stationary post with the post interface and insert, then rotate clockwise and tighten it.




## 3 Installation

### 3.3 Pole mounting for using table top

Align the fixing pipe under the body directly to the base interface, tighten by turning clockwise.

### 3.4 Add aromatherapy oil

 Rotate the aroma diffuser cover in the center of the front grille counterclockwise to open it, drop the essential oil (floral water) on the cotton sheet in the center of the front grille, then align the aroma diffuser cover and press lightly. After assembling according to the alignment mark, tighten it clockwise.

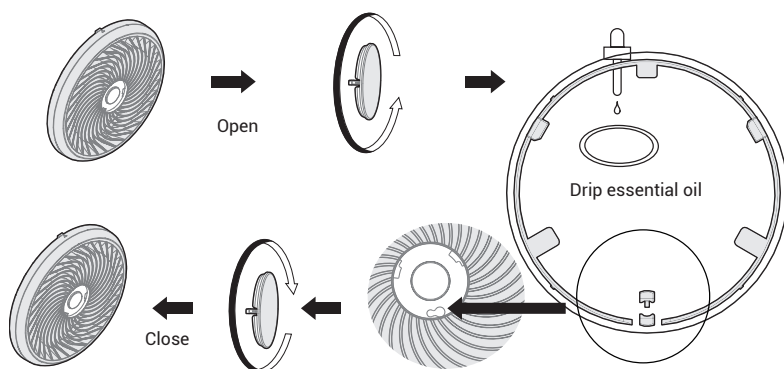


When assembling, first insert the large round hole according to the alignment mark, and then rotate clockwise.







 This product does not come with essential oil. It needs to be purchased separately.
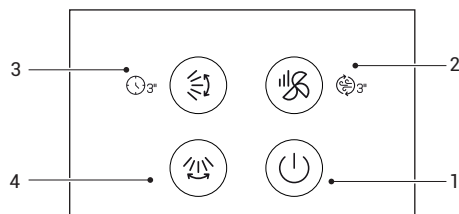
## 4 Operation


### 4.1 Description of buttons







 
No.	Button	Function description
1	 On/Standby button	<ul style="list-style-type: none"> <li>Press this button to start or stop the fan.</li> </ul>
2	 Wind speed button (wind type)	<ul style="list-style-type: none"> <li>When the fan is running, press this button to switch the fan speed in the sequence of low-medium-high-low...; the corresponding level indicator light turns on.</li> <li>When the fan is running, press and hold this button to enter the circulating air, and hold it again to exit the circulating air.</li> </ul>
3	 Up/down oscillator button (timer)	<ul style="list-style-type: none"> <li>In the power-on state, press this button to turn on/off the up/down oscillator.</li> <li>In the power-on state, press and hold this button to enter the timer adjustment, continue to press it to switch in the following sequence: 1h, 2h, 3h, 4h (1h and 3h indicators turn on at the same time), 5h (2h and 3h indicators turn on at the same time), 6h (1h, 2h and 3h indicators turn on at the same time), off, the setting is confirmed if there is no operation for 3 seconds. In standby mode, press and hold this button to set scheduled power-on; continue to press it to switch in the following sequence: 1h, 2h, 3h, 4h (1h and 3h indicators turn on at the same time), 5h (2h and 3h indicators turn on at the same time), 6h (1h, 2h and 3h indicators turn on at the same time), off; the setting is confirmed if there is no operation for 3 seconds.</li> </ul>
4	 Left/right oscillator button	<ul style="list-style-type: none"> <li>In the power-on state, press this button to turn on/off the left/right oscillator.</li> </ul>
Other function description		<ul style="list-style-type: none"> <li>After plugging in the power and entering the power-on state, if there is no operation on the machine, it will automatically shut down after 15 hours</li> </ul>
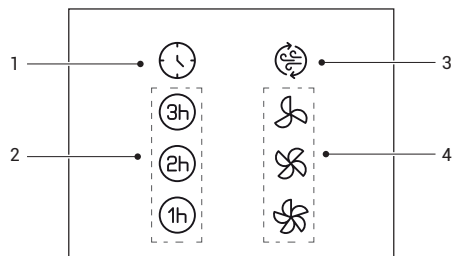
## 4 Operation



### 4.2 Display panel description



  No.	Icon	Function description
1		<ul style="list-style-type: none"><li>• Timer function indicator.</li></ul>
2	<div>3 hour 2 hour 1 hour</div>	<ul style="list-style-type: none"><li>• Schedule time indicator.</li></ul>
3		<ul style="list-style-type: none"><li>• Circulating air indicator.</li></ul>
4	<div>  </div>	<ul style="list-style-type: none"><li>• Low speed indicator.</li><li>• Medium speed indicator.</li><li>• High speed indicator.</li></ul>

# 5 Remote control

## 5.1 Description of remote control buttons

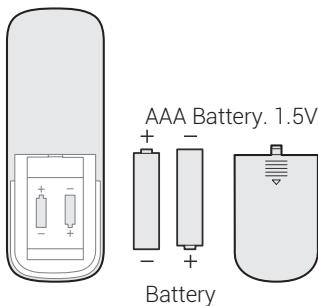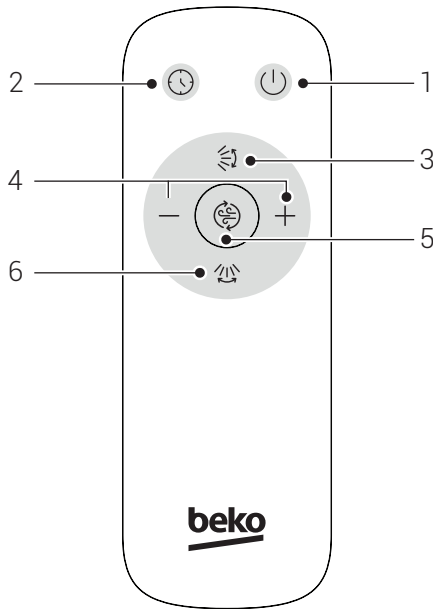

No.	But-ton	Function description
1		• On/standby.
2		• Directly touch to set the schedule on/off time.
3		• Turn on/off up/down oscillator.
4		• Directly touch to in-crease or decrease the wind speed; when the timer light is flashing, the schedule time can be increased or de-creased.
5		• Turn on/off circulating air.
6		• Turn on/off left/right oscillator.



- The remote control can be used normally within 5 me-ters from the front of the product, and the deviation angle is within 30 degrees.
- Batteries contain many heavy metals and acid-base substances, which threaten human health; used batteries should be recycled separately.
- Battery for the remote con-trol: AAA 1.5V

## 6 Cleaning an maintenance

### 6.1 Cleaning

Before cleaning and assembling, fan must be unplugged.



**WARNING:** Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use any of the following as a cleaner: gasoline, thinner.

- To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
- Please wipe the exterior parts with a soft cloth soaking a mild detergent.



**WARNING:** Do not allow water or any other liquid into the motor housing or interior parts.

- Plastic parts should be cleaned with a soft cloth moisten with mild soap.
- Thoroughly remove soap film with dry cloth.

### 6.2 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or on the packaging. The appliance may get damaged.
- Dropping the appliance may render it non operational or cause permanent damage.

## 7 Troubleshooting

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the table below carefully in order to save your time and money that may cost for calling to the service center.

Problem	Cause	Solution
The machine does not work properly after installed	The power cable is not plugged in or has poor contact.	Make sure the plug is properly inserted into the socket.
	The switch on the body is not turned on.	Turn on the switch on the body.
The remote does not work	The battery needs replacing.	Replace the battery.
	The remote is being used more than 5m away from the fan.	Use the remote closer to the fan and make sure it is pointing directly at the display panel.