
Stand fan User Manual

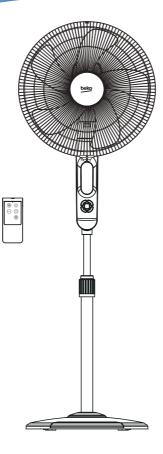

EFS6000B

EN



Please read this user manual first!

Dear Customer,

Thank you for preferring a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Meanings of the symbols

Following symbols are used in the various section of this manual:



This product has been produced in environmentally friendly, modern facilities

CONTENTS

| 1 | Safety instructions | 4 |
|-------------------|---|----------|
| 2 | Installation instructions | 6 |
| 2.1 | Name of components | 6 |
| 3 | Instructions for use | 8 |
| 3.1 3.2 3.3 | Instructions for key of remote controller Instructions for display of body Instructions for operation of body | 89 99 |
| 4 | Other | 10 |
| 4.1 4.2 4.3 | Maintenance instruction Cleaning Technical data | |
| 5 | Disposal | 11 |

1 Safety instructions

Warning

Read rules for safe operation and instructions carefully.


- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- Keep electrical appliances out of reach from children or infirm persons. Do not let them use the appliances without supervision.
- When the fan was assembled, the rotor blade guard shall not be taken off anymore.
 - Prior cleaning unplug the fan.
 - The rotor guard shall not be dissembled/opened to clean the rotor blades.
 - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.

1 Safety instructions

Rules for safe operation

- Never insert fingers, pencils, or any other object through the grille when fan is running.
- Disconnect fan when moving from one location to another.
- Be sure fan is on a stable surface when operating to avoid overturning.
- Do not use fan in window, rain may create electrical hazard.
- Household use only.

2 Installation instructions

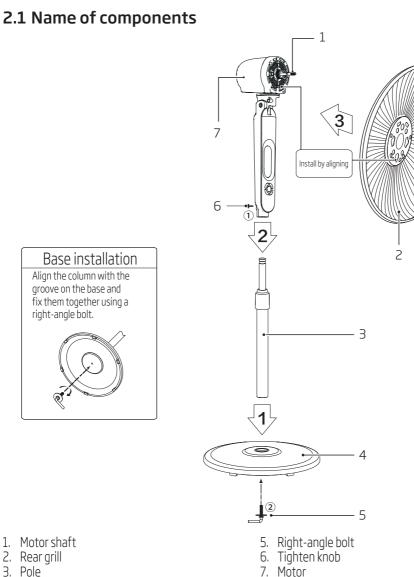


4. Base



Considerate hint:


Remove 1, 2 parts from the component before performing installation.

2 Installation instructions

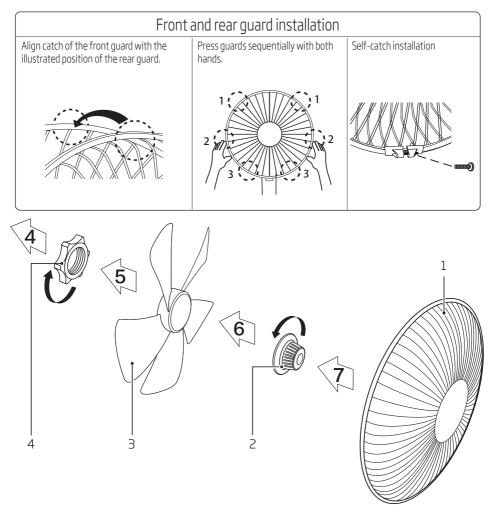

- 1. Front grill
- 2. Lock nut of blade
 - Lock nut of blade anticlockwise, and then install the front fan cover.
- 3. Blade
 - Pull the blade to rotate after installing, so as to ensure that the blade can be normally rotated.
- 4. Lock nut of grill
 - Screw the lock nut of grill clockwise, and in the meantime, fix the rear grill.

3.1 Instructions for key of remote controller

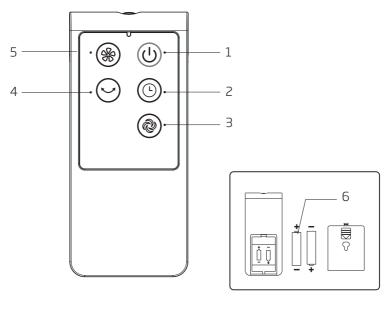

- 1. "On/Off" key
- 2. "Timer" key
- 3. "Mode" key

- 4. "OSC" key
- 5. "Speed" key
- 6. Battery




Considerate hint:


Effective range of remote control: within 5 m distance and 30-degree deflection in front of product.

3.2 Instructions for display of body

- 1. Mode display
- 2. Smart display
- 3. Oscillating display
- 4. Pre-set/timer display
- 5. Speed display

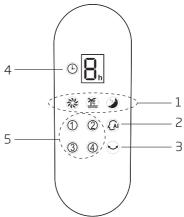

3.3 Instructions for operation of body

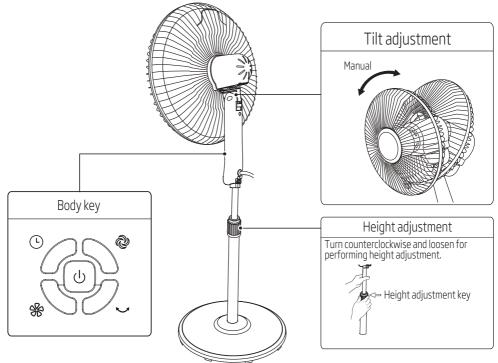

4 Other

4.1 Maintenance instruction

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

- 1. Before cleaning and assembling, fan must be unplugged.
- 2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
- 3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
- 4. Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use any of the following as a cleaner: gasoline, thinner.
- 5. Do not allow water or any other liquid into the motor housing or interior parts.

4.2 Cleaning

- 1. Be sure to unplug from the electrical supply source before cleaning.
- 2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

4.3 Technical data

Power supply: 220V-240V, 50Hz

Technical and design modifications reserved.

5 Disposal

6

Note: Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



| Information | | | | | |
|--|---|-------|------------|--|--|
| Description | Symbol | Value | Unit | | |
| Maximum fan flow rate | F | 55 | m³/min | | |
| Fan power input | Р | 55 | W | | |
| Service value | SV | 1.00 | (m³/min)/W | | |
| Standby power consumption | P _{SB} | 0.5 | W | | |
| Fan sound power level | L _{WA} | 63 | dB(A) | | |
| Maximum air velocity | С | 2.83 | meters/sec | | |
| Measurement standard for service value | IEC 60879: 1986+ (corr. 1992) | | | | |
| Contact details for obtaining more information | Arcelik: Arcelik A.S. Sutluce, Karaagac Cd. 2, 34445 Beyoglu Istanbul Turkey | | | | |

www.beko.com